

Convenience System , (L0L)

From September 2014



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


erWin

Left Front Exterior Door Handle Touch Sensor, Driver Door Control Module

- G605 Left Front Exterior Door Handle Touch Sensor
- J386 Driver Door Control Module
- ST3 Fuse Panel 3
- SB6 Fuse 6 (On Fuse Panel B)
- T2hc 2-Pin Connector
- T20e 20-Pin Connector
- T23a 23-Pin Connector, In the Left A-Pillar

- 34 Ground Connection Under Driver Seat
- 35 Ground Connection Under Front Passenger Seat
- 205 Ground Connection (in Driver Door Wiring Harness)
- 371 Ground Connection 6 (in Main Wiring Harness)

- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 For RHD Vehicles
- *3 Data Bus Wire (CAN Bus)

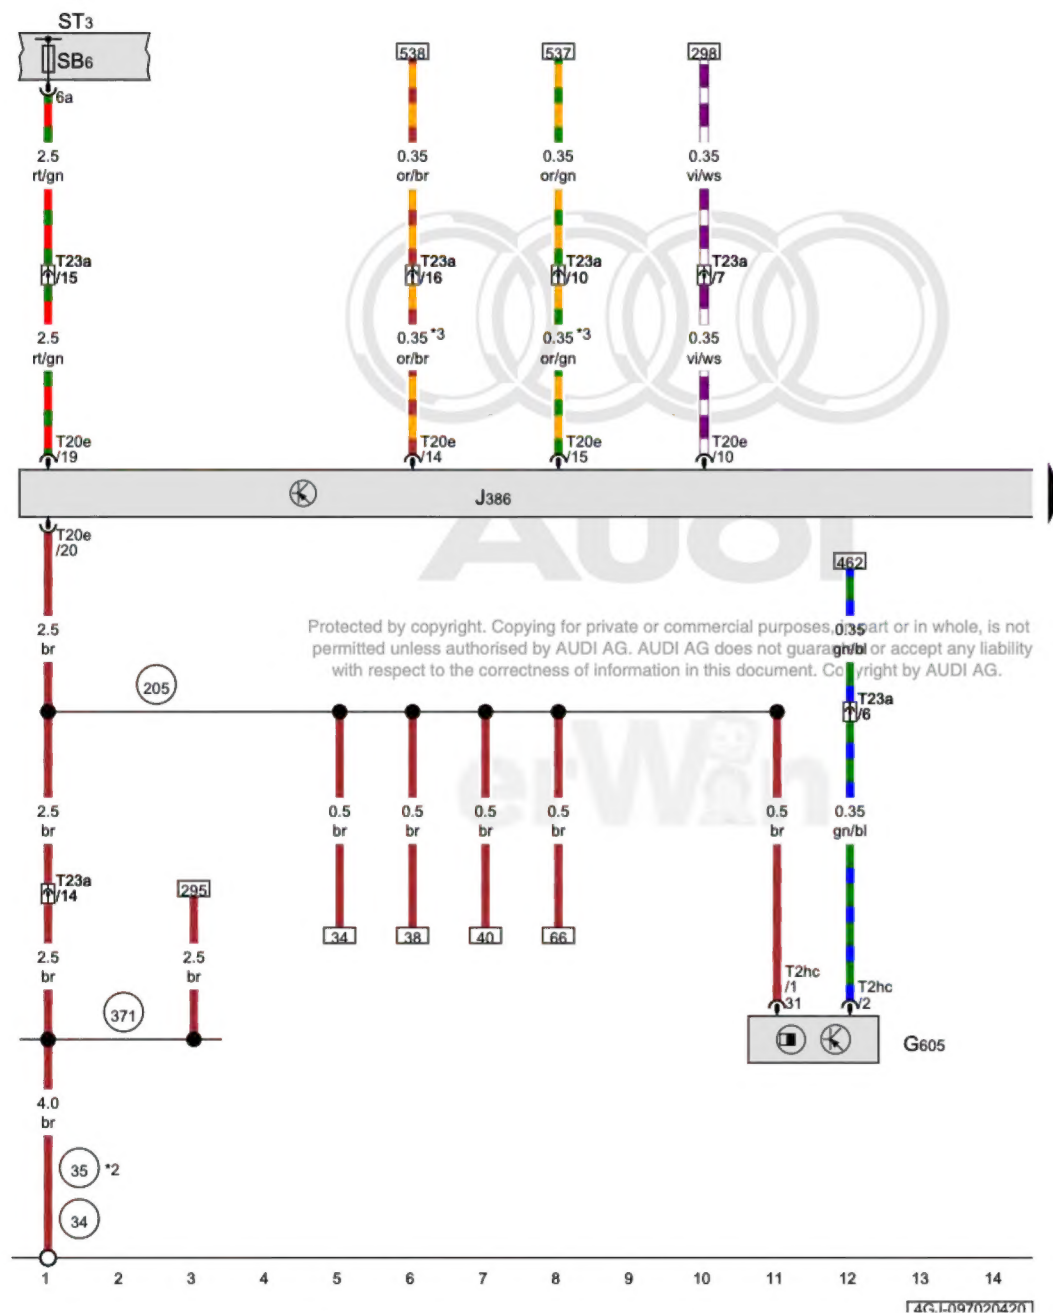

Driver Door Control Module, Driver Door Closing Aid Motor

- J136 Memory Seat/Steering Column Adjustment Control Module
- J386 Driver Door Control Module
- T2hd 2-Pin Connector
- T8a 8-Pin Connector
- T17m 17-Pin Connector, In the Coupling Point for the Left Front Seat
- T20e 20-Pin Connector
- T23a 23-Pin Connector, In the Left A-Pillar
- T32m 32-Pin Connector
- V302 Driver Door Closing Aid Motor
- Y7 Automatic Dimming Interior Rearview Mirror


B427 Mirror Auto-Dimming Signal Connection 1 (in Main Wiring Harness)


B428 Mirror Auto-Dimming Signal Connection 2 (in Main Wiring Harness)

R66 Central Locking Positive Connection (in Driver Door Wiring Harness)

- * Refer to Applicable Standard Equipment Wiring Diagram
- *2 For Vehicles with Door Closing Aid

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

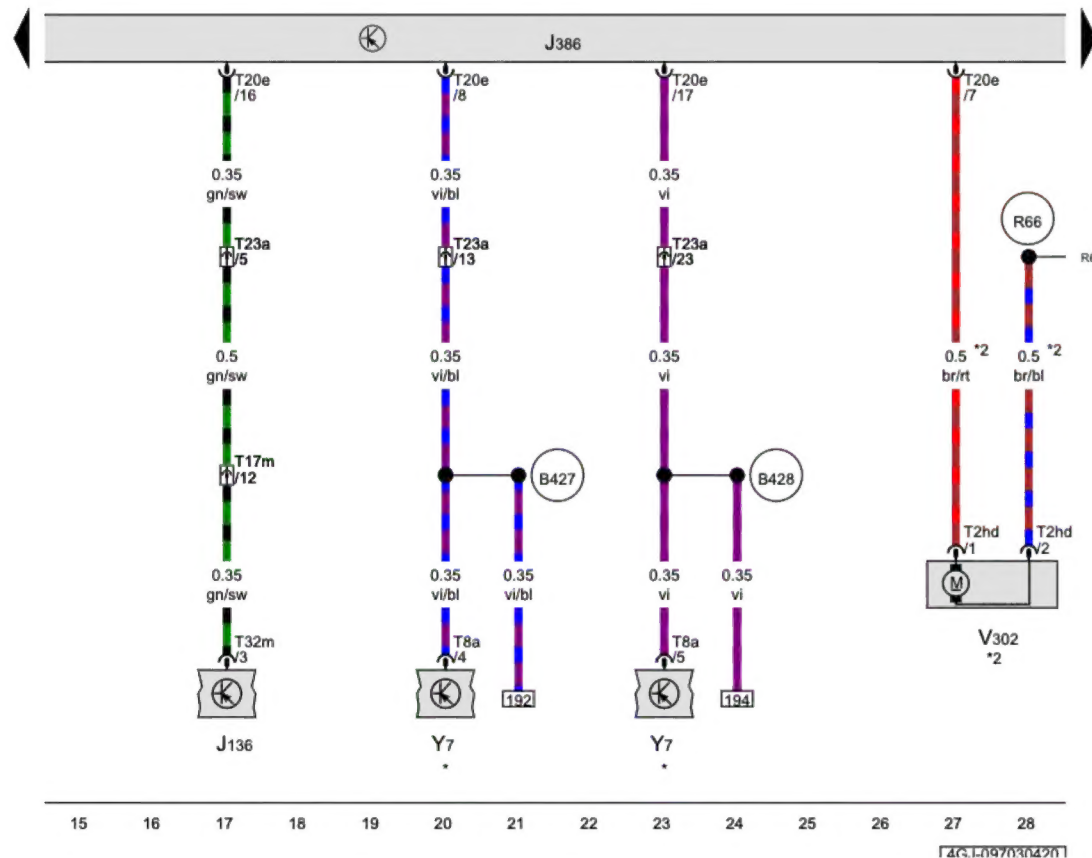

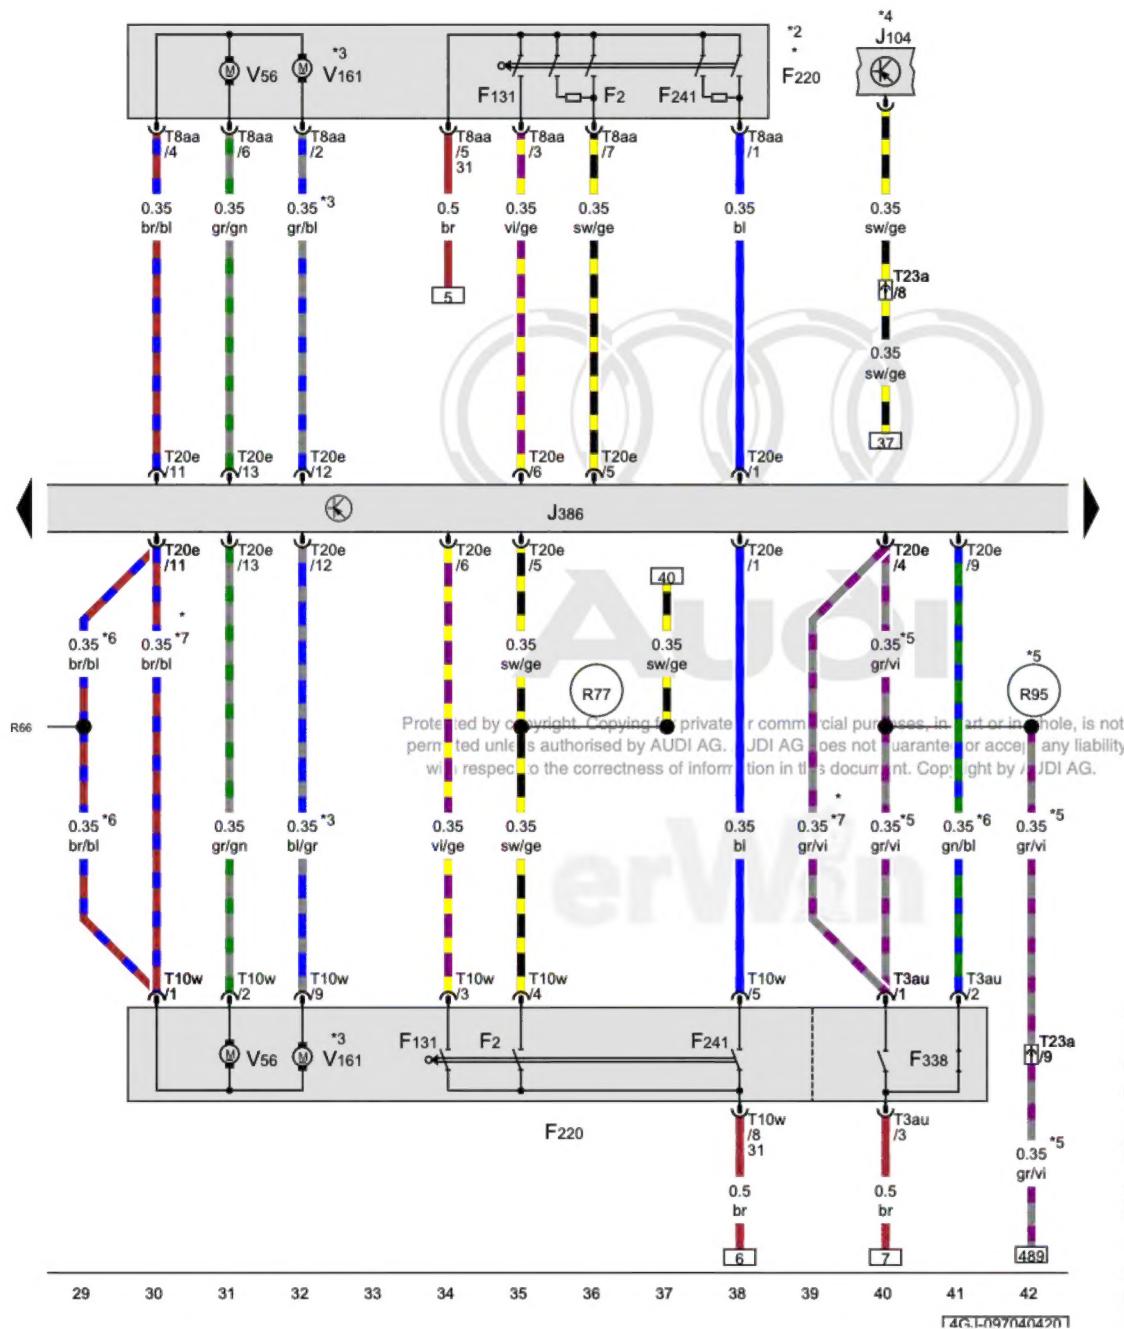

Driver Central Locking Lock Unit, Driver Door Control Module

- F2 Driver Door Contact Switch
- F131 Left Front Central Locking System Actuator
- F220 Driver Central Locking Lock Unit
- F241 Driver Lock Cylinder Contact Switch
- F338 Driver Door Closing Aid Contact Switch
- J104 ABS Control Module
- J386 Driver Door Control Module
- T3au 3-Pin Connector
- T8aa 8-Pin Connector
- T10w 10-Pin Connector
- T20e 20-Pin Connector
- T23a 23-Pin Connector, In the Left A-Pillar
- V56 Driver Door Central Locking System Motor
- V161 Driver Door Central Locking -Safe- Motor


- R66 Central Locking Positive Connection (in Driver Door Wiring Harness)
- R77 Door Contact Switch Connection 1 (in Driver Door Wiring Harness)
- R95 Connection 2 (in Driver Door Wiring Harness)

- * For Vehicles Without Door Closing Aid
- *2 For Vehicles Without Adaptive Cruise Control (ACC)
- *3 Not for USA
- *4 Refer to Applicable ABS Wiring Diagram
- *5 For Vehicles with Hybrid Drive
- *6 For Vehicles with Door Closing Aid
- *7 For Vehicles with Adaptive Cruise Control (ACC)

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Power Window Control Head in Driver Door, Driver Door Control Module

- E40 Left Front Window Regulator Switch
- E53 Left Rear Window Regulator Switch in Driver Door
- E55 Right Rear Window Regulator Switch in Driver Door
- E81 Right Front Power Window Switch in Driver Door
- E512 Power Window Control Head in Driver Door
- J386 Driver Door Control Module
- T10y 10-Pin Connector
- T32k 32-Pin Connector

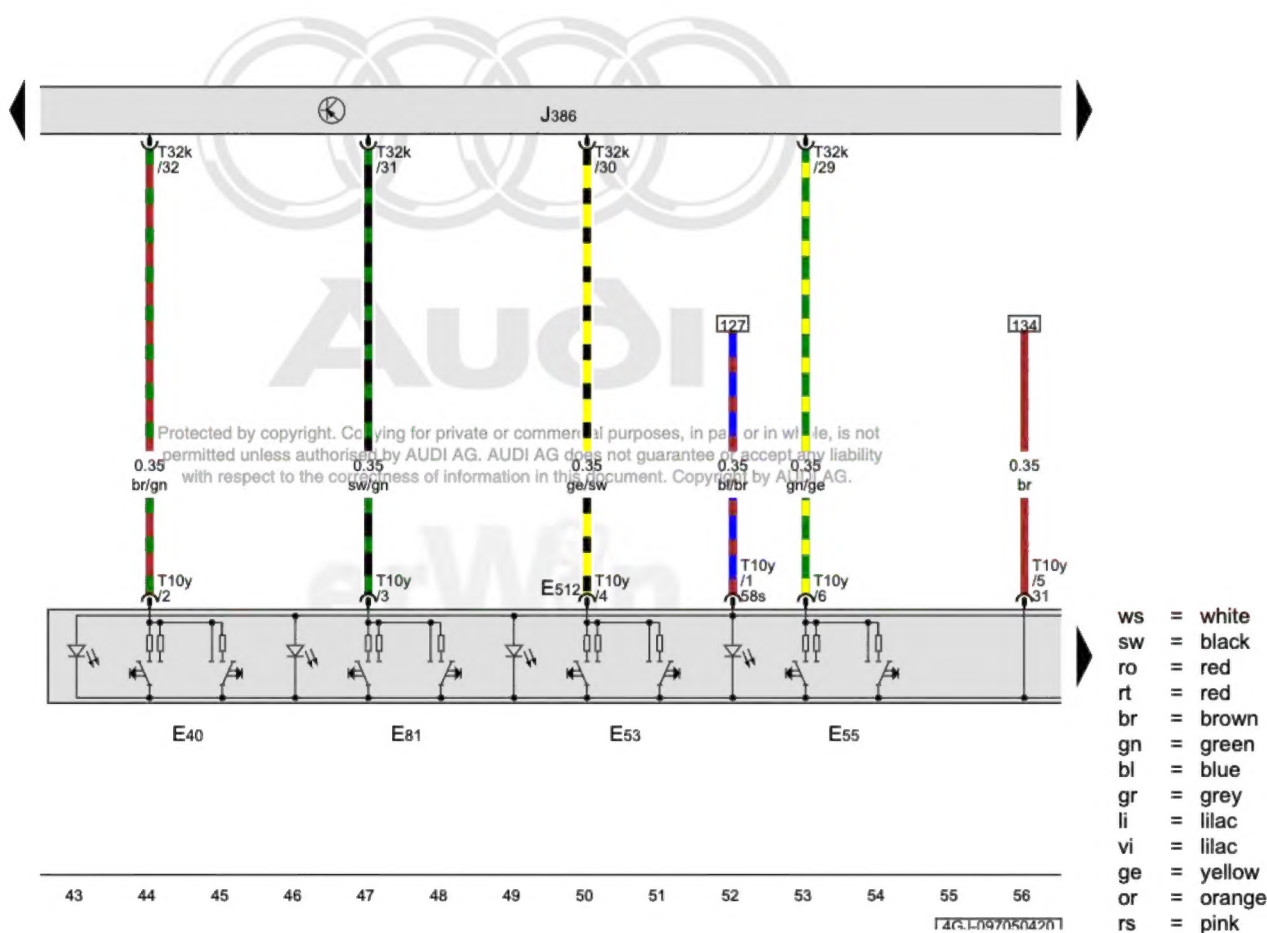

Child Safety Lock Button, Power Window Control Head in Driver Door, Driver Door Control Module, Left Front Exterior Door Handle Illumination Bulb, Driver Window Regulator Motor

- E318 Child Safety Lock Button
- E510 Left Child Safety Lock Button
- E511 Right Child Safety Lock Button
- E512 Power Window Control Head in Driver Door
- J386 Driver Door Control Module
- L162 Left Front Exterior Door Handle Illumination Bulb
- T2he 2-Pin Connector
- T2hf 2-Pin Connector
- T6as 6-Pin Connector
- T10y 10-Pin Connector
- T32k 32-Pin Connector
- V147 Driver Window Regulator Motor
- * For Vehicles Without Child Safety Lock
- *2 For Vehicles with Auxiliary Lamps
- *3 For Vehicles with Child Safety Lock

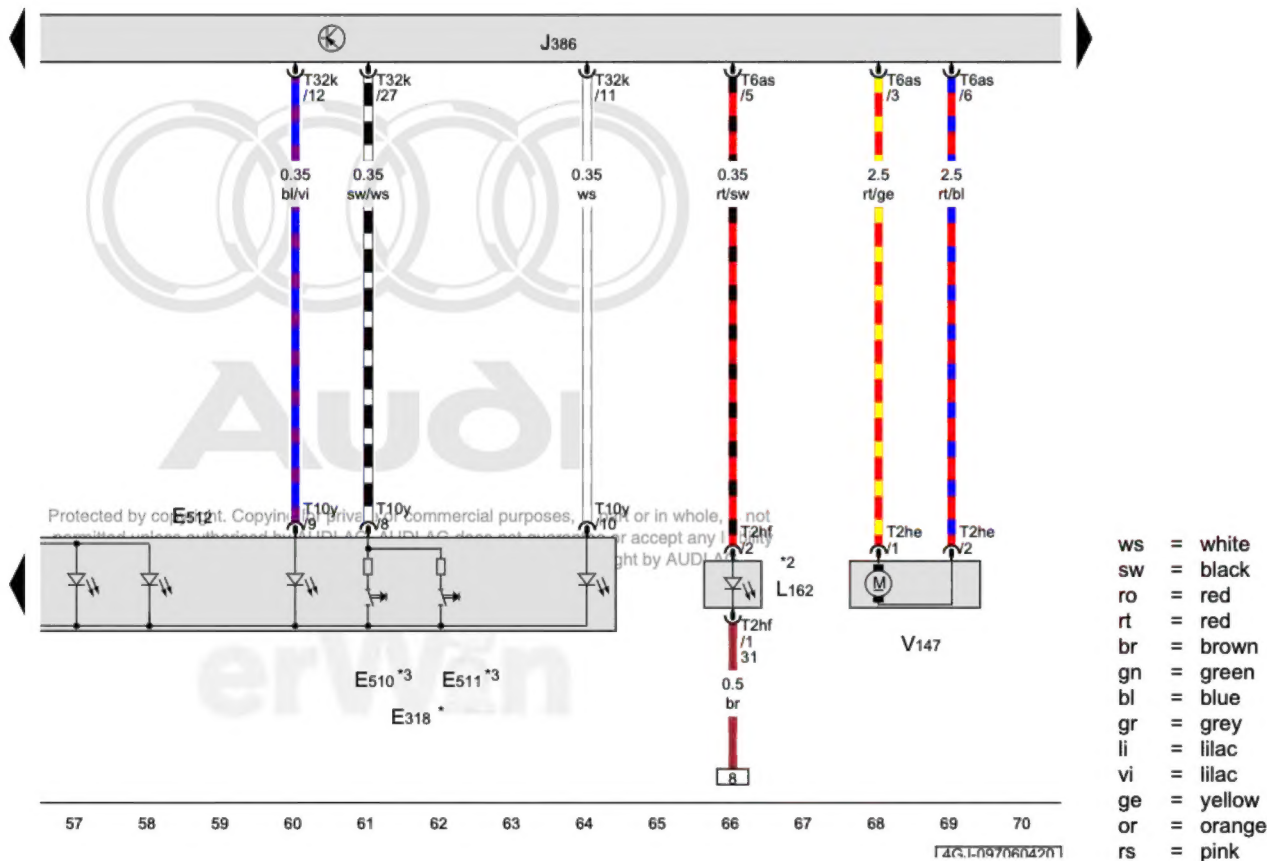




Mirror Adjusting Switch, Alarm System Deactivation Switch, Driver Door Control Module


- E43 Mirror Adjusting Switch
- E48 Mirror Selector Switch
- E168 Folding Mirror Adjustment Switch
- E217 Alarm System Deactivation Switch
- J386 Driver Door Control Module
- T4bi 4-Pin Connector
- T4bk 4-Pin Connector, In the Left Front Door
- T10x 10-Pin Connector
- T32k 32-Pin Connector
- * For Vehicles with Anti-Theft Alarm System and Interior Monitoring and Towing Prevention

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

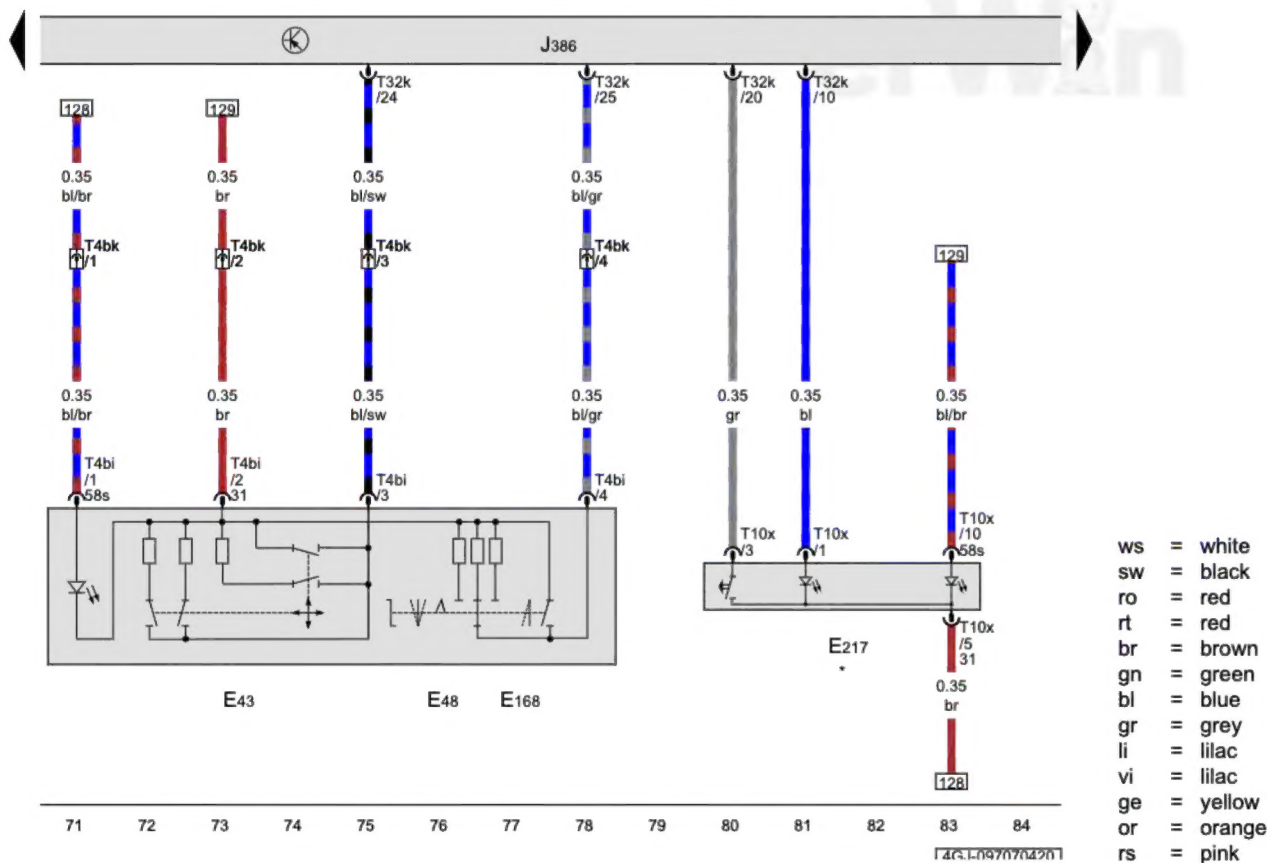

Driver Door Control Module, Driver Exterior Rearview Mirror, Driver Mirror Adjustment Motor 2

- G514 Driver Exterior Rearview Mirror Horizontal Position Sensor
- G515 Driver Exterior Rearview Mirror Vertical Position Sensor
- J386 Driver Door Control Module
- L131 Driver Exterior Rearview Mirror Turn Signal Bulb
- T16l 16-Pin Connector
- VX4 Driver Exterior Rearview Mirror
- V17 Driver Mirror Adjustment Motor 2
- V121 Driver Exterior Rearview Mirror Folding Motor
- V149 Driver Mirror Adjustment Motor
- Z4 Heated Driver Exterior Rearview Mirror
- * Optional Equipment
- *2 For Vehicles with Folding Mirrors

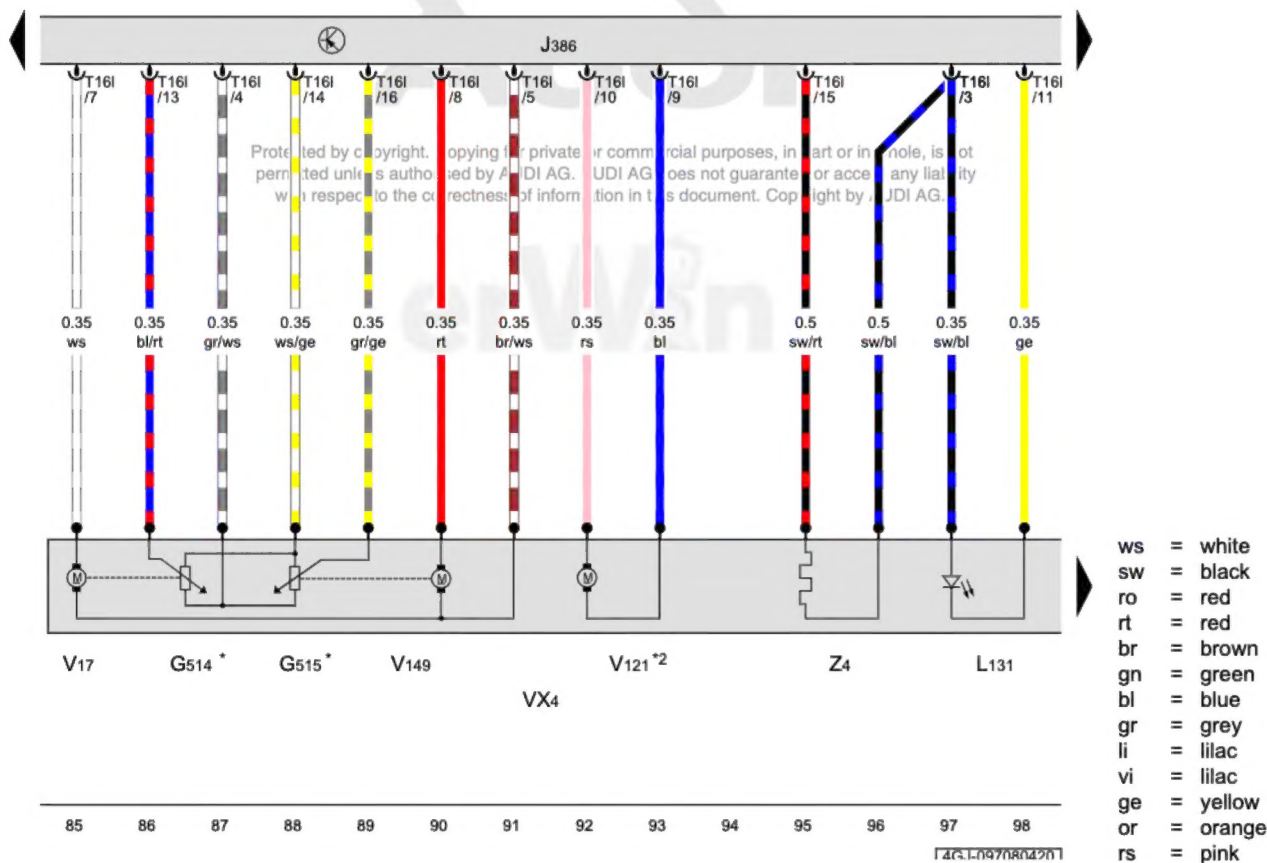


Lane Change Assistance Button, Driver Door Control Module, Lane Change Assistance Warning Lamp in Driver Exterior Rearview Mirror, Driver Exterior Rearview Mirror

- E530 Lane Change Assistance Button
- J386 Driver Door Control Module
- K232 Lane Change Assistance Indicator Lamp
- K233 Lane Change Assistance Warning Lamp in Driver Exterior Rearview Mirror
- L156 Switch Illumination Bulb
- T2et 2-Pin Connector, In the Driver Door
- T2ev 2-Pin Connector
- T5aa 5-Pin Connector, In the Left Front Door
- T6ag 6-Pin Connector
- T16l 16-Pin Connector
- T23a 23-Pin Connector, In the Left A-Pillar
- T32k 32-Pin Connector
- VX4 Driver Exterior Rearview Mirror
- Y20 Driver Automatic Dimming Exterior Rearview Mirror

303 Ground Connection 3 (in Driver Door Wiring Harness)

* For Vehicles with Automatic Dimming Exterior Rearview Mirror

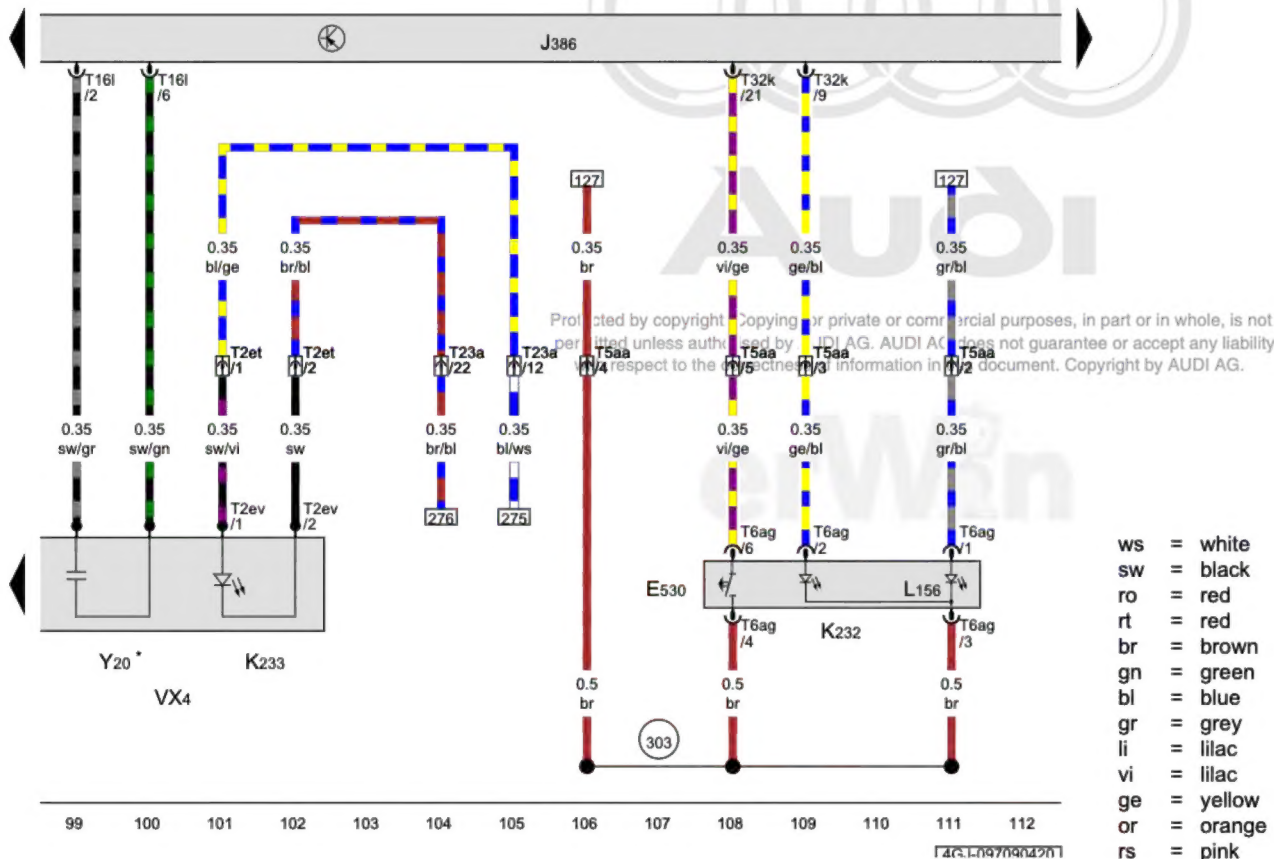

Driver Interior Locking Switch, Fuel Filler Door Remote Release Switch, Driver Door Control Module, Central Locking -Safe- Indicator Lamp, Driver Door Opener Illumination Bulb


- E150 Driver Interior Locking Switch
- E204 Fuel Filler Door Remote Release Switch
- J386 Driver Door Control Module
- K133 Central Locking -Safe- Indicator Lamp
- L108 Driver Door Opener Illumination Bulb
- T2hg 2-Pin Connector
- T2hh 2-Pin Connector
- T4bl 4-Pin Connector
- T4ha 4-Pin Connector, Blue
- T32k 32-Pin Connector

267 Ground Connection 2 (in Driver Door Wiring Harness)

R52 Connection 58S (in Driver Door Wiring Harness)

R96 Connection 3 (in Driver Door Wiring Harness)

- * For Vehicles with Hybrid Drive
- *2 Switch Ground Output

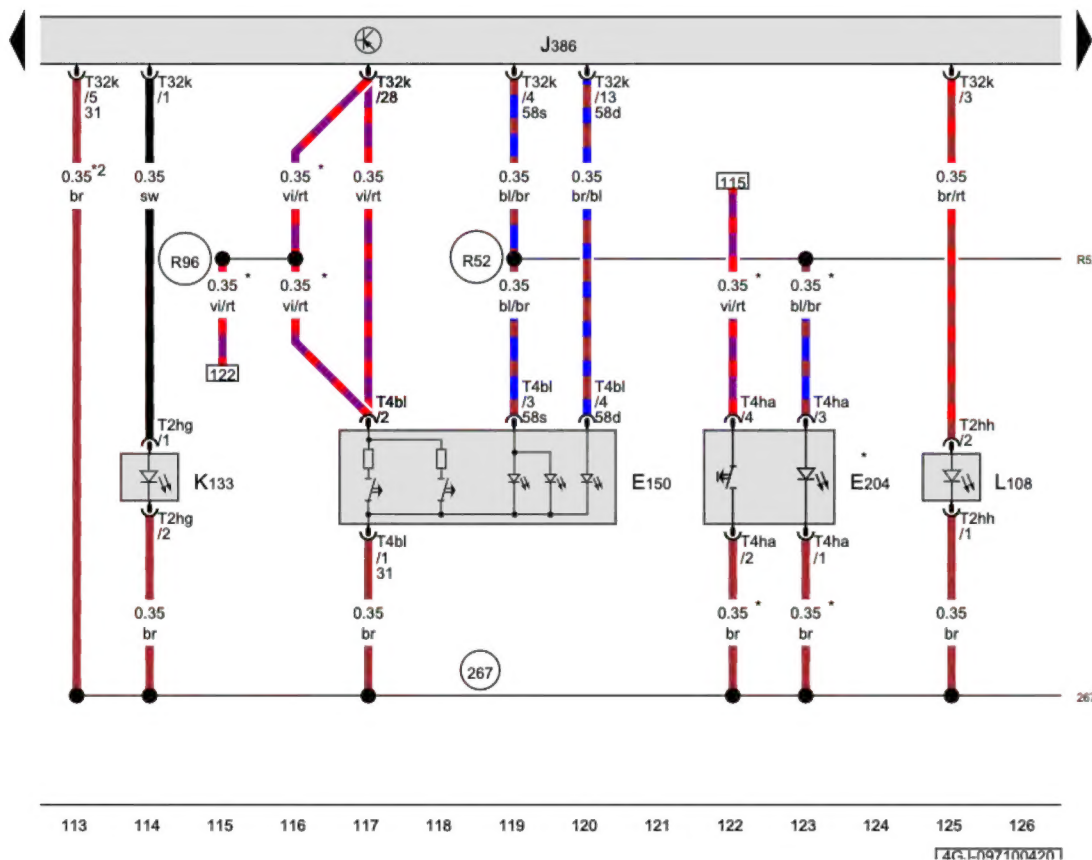

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Rear Lid Remote Release Button, Driver Door Control Module, Driver Door Storage Compartment Illumination Bulb, Driver Door Ambient Lighting Bulb


- E233 Rear Lid Remote Release Button
- J386 Driver Door Control Module
- L160 Driver Door Storage Compartment Illumination Bulb
- L164 Driver Door Ambient Lighting Bulb
- T2hm 2-Pin Connector
- T4bm 4-Pin Connector
- T4bn 4-Pin Connector
- T32k 32-Pin Connector

267 Ground Connection 2 (in Driver Door Wiring Harness)

R52 Connection 58S (in Driver Door Wiring Harness)

R94 Connection 1 (in Driver Door Wiring Harness)

* For Vehicles with Auxiliary Lamps

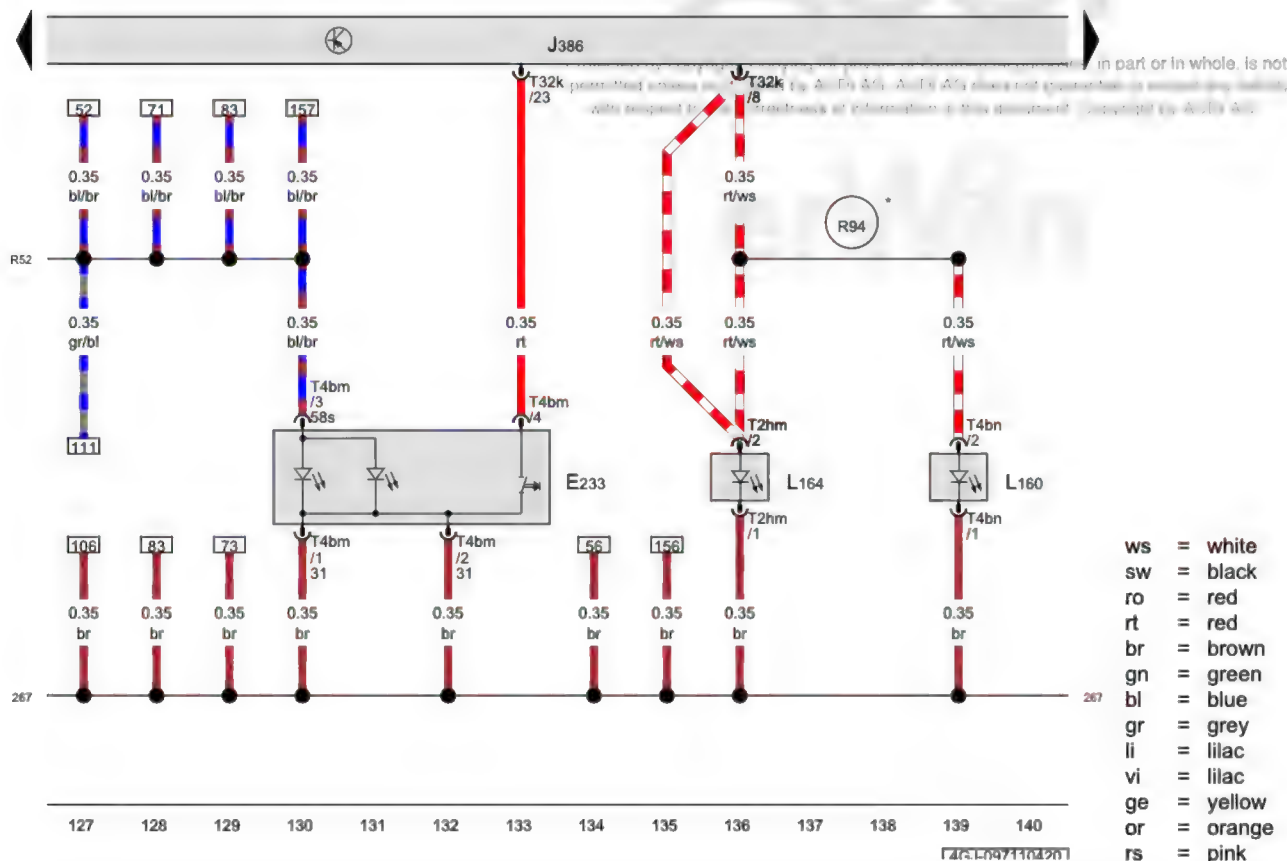


Driver Door Control Module, Driver Door Warning Lamp, Left Front Entry Lamp, Fiber Optic Cable for Left Front Sill Panel Ambient Lighting

- J386 Driver Door Control Module
- T2hi 2-Pin Connector
- T2hk 2-Pin Connector
- T2hl 2-Pin Connector
- T5aa 5-Pin Connector, In the Left Front Door
- T23a 23-Pin Connector, On the Left A-Pillar
- T32k 32-Pin Connector
- W30 Driver Door Warning Lamp
- W31 Left Front Entry Lamp
- W67 Fiber Optic Cable for Left Front Sill Panel Ambient Lighting

267 Ground Connection 2 (in Driver Door Wiring Harness)

R56 Entry Lamp Connection (in Driver Door Wiring Harness)


- * For Vehicles with Auxiliary Lamps
- *2 Through May 2017
- *3 For Vehicles Without Auxiliary Lamps

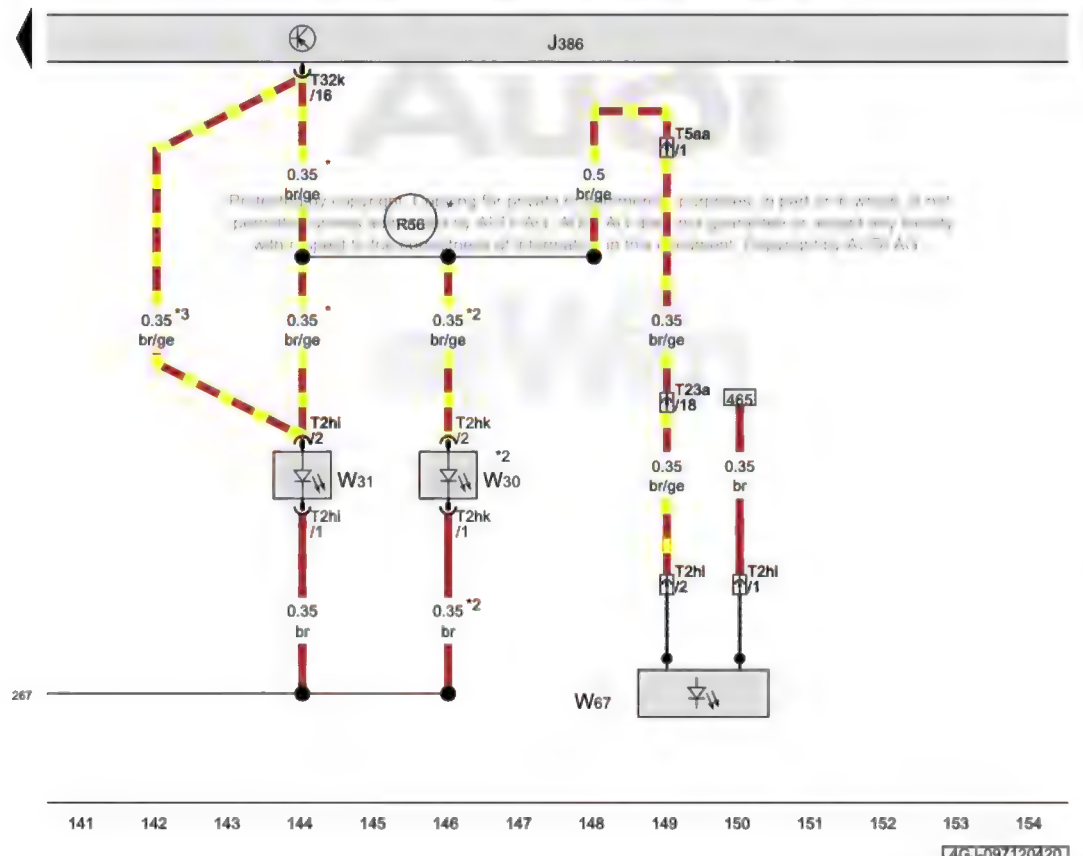

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Driver Memory Seat Control Head, Emergency Off Button, Memory Seat Position 1 Button, Driver Seat Memory Button, Driver Door Control Module

- E97 Driver Memory Seat Control Head
- E190 Emergency Off Button
- E218 Memory Seat Position 1 Button
- E219 Memory Seat Position 2 Button
- E283 Driver Seat Memory Button
- J386 Driver Door Control Module
- T10o 10-Pin Connector
- T32k 32-Pin Connector

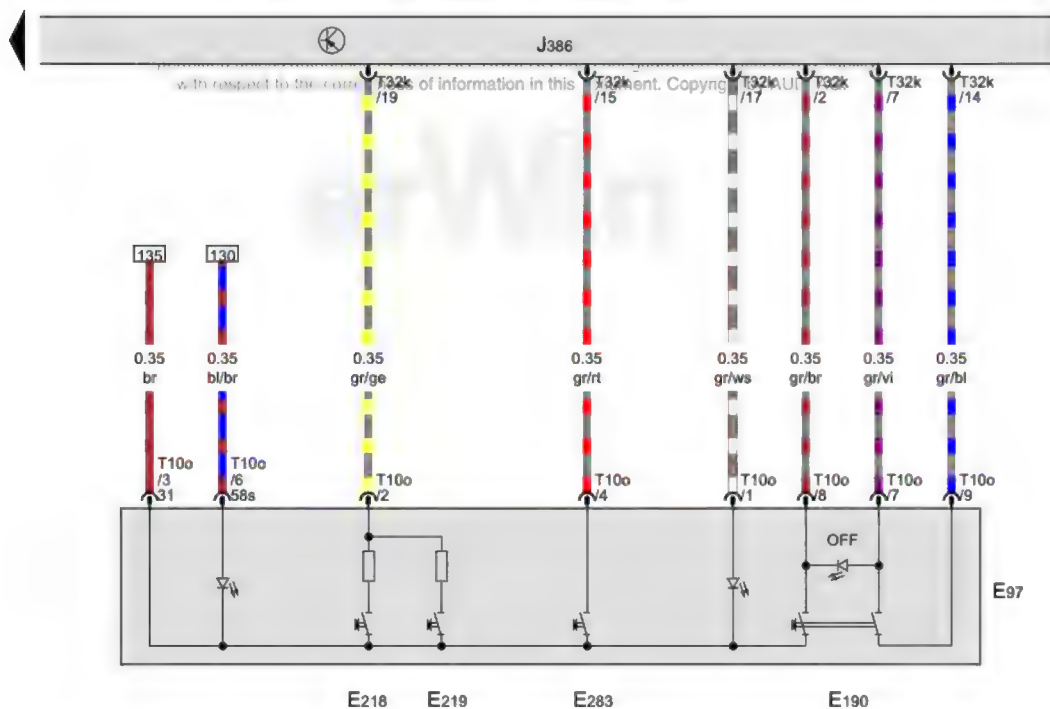

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


155 156 157 158 159 160 161 162 163 164 165 166 167 168

7451097130220

Right Front Exterior Door Handle Touch Sensor, Front Passenger Door Control Module

- G606 Right Front Exterior Door Handle Touch Sensor
- J387 Front Passenger Door Control Module
- ST1 Fuse Panel 1
- SF6 Fuse 6 (On Fuse Panel F)
- T2ho 2-Pin Connector
- T20f 20-Pin Connector
- T23b 23-Pin Connector, In the Right D-Pillar

- 43 Ground Connection on A-Pillar, Lower Right
- 206 Ground Connection (in Front Passenger Door Wiring Harness)
- 379 Ground Connection 14 (in Main Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions

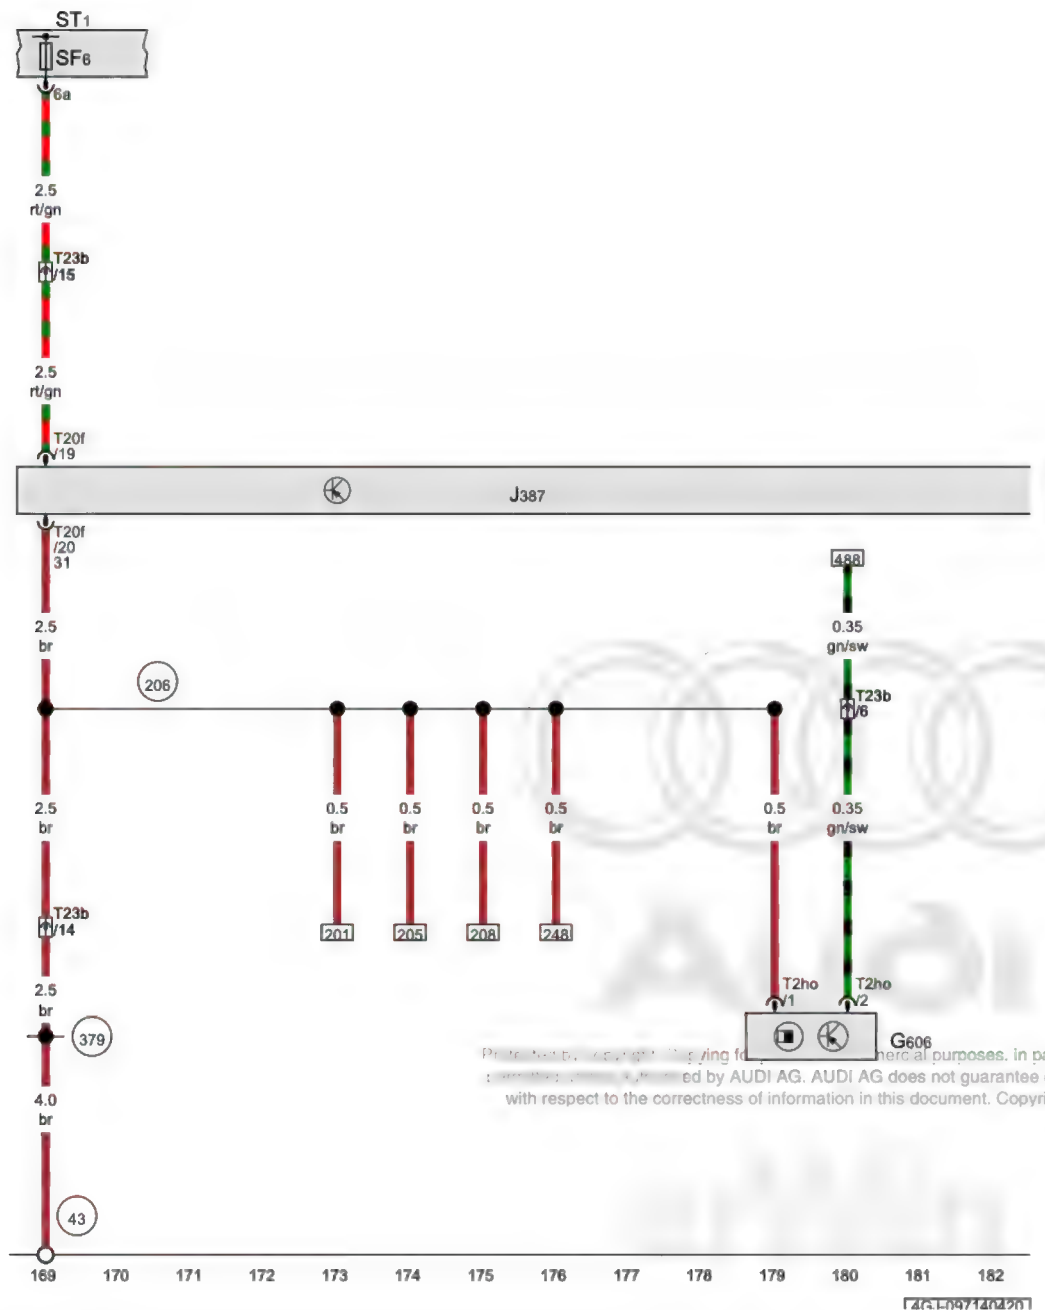


- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Printed and published by Audi AG for commercial purposes. In part or in whole, is not permitted to be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or by any information storage and retrieval system, without the prior written permission of Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright © 2020 Audi AG.

Front Passenger Door Control Module


- J387 Front Passenger Door Control Module
- J521 Front Passenger Memory Seat Control Module
- T17n 17-Pin Connector, In the Coupling Point for the Right Front Seat
- T20f 20-Pin Connector
- T23b 23-Pin Connector, In the Right D-Pillar
- T32n 32-Pin Connector
- * Data Bus Wire (CAN Bus)

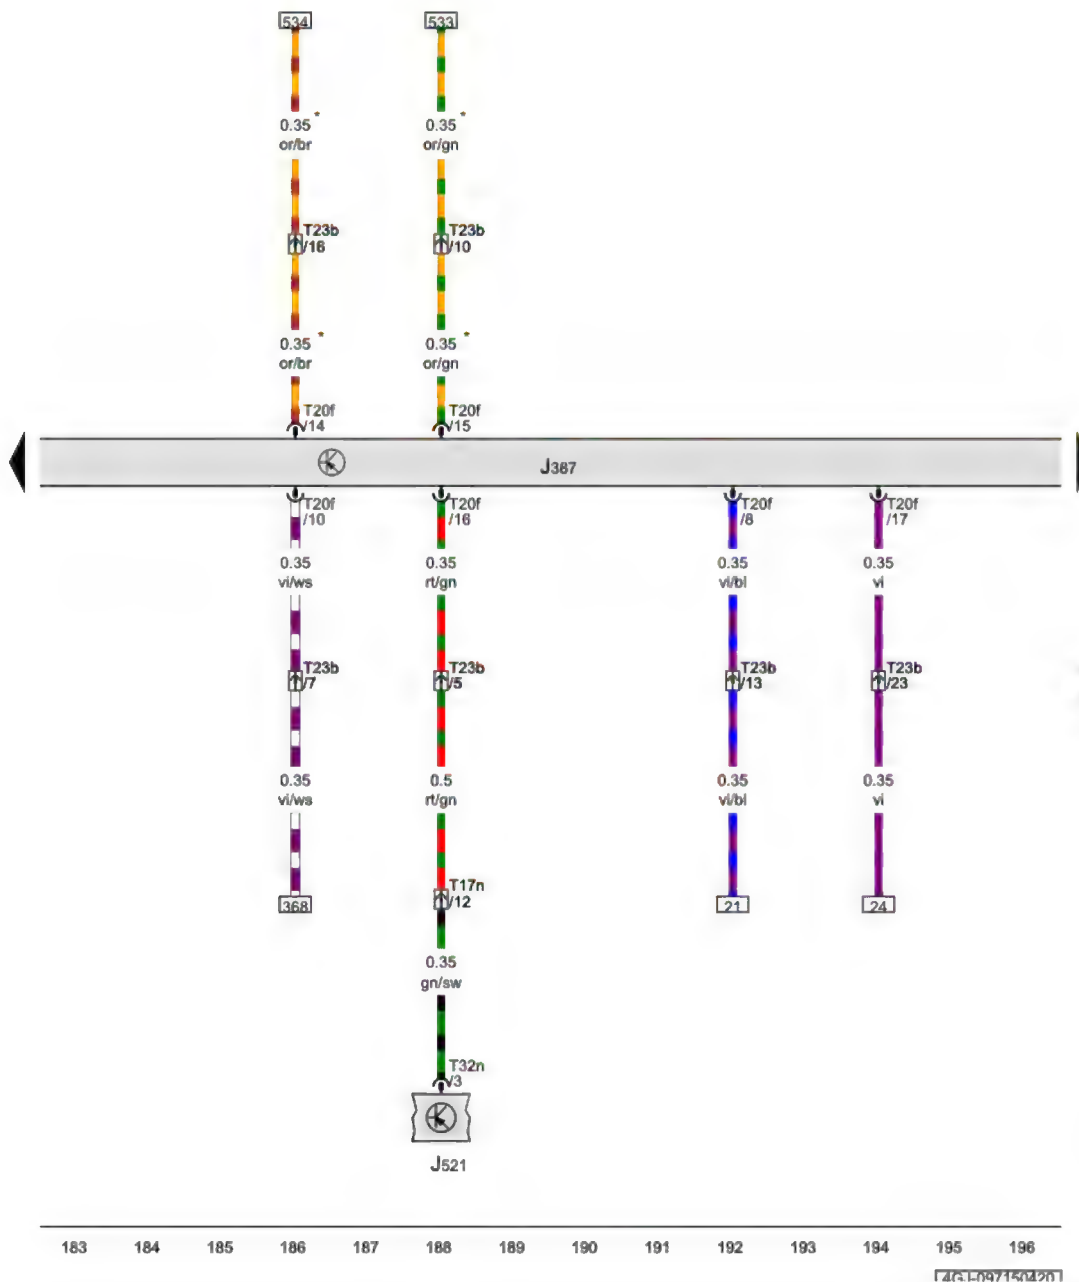

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted. All rights reserved by Audi AG. Audi AG is not responsible for any liability, which may arise from the use of this information, or from the consequences of its use.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Central Locking Lock Unit, Front Passenger Door Control Module, Front Passenger Closing Aid Motor

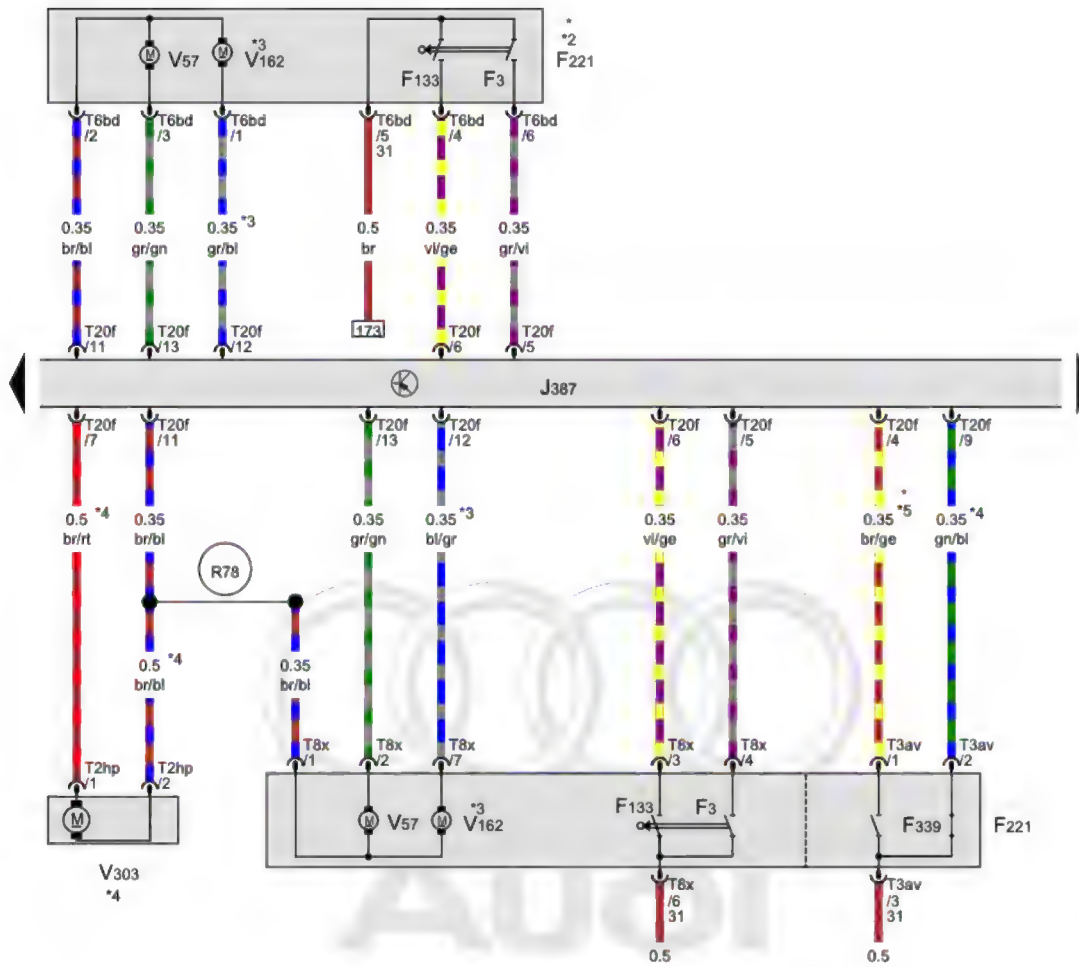

- F3 Front Passenger Door Contact Switch
- F133 Right Front Central Locking System Actuator
- F221 Front Passenger Central Locking Lock Unit
- F339 Front Passenger Door Closing Aid Contact Switch
- J387 Front Passenger Door Control Module
- T2hp 2-Pin Connector
- T3av 3-Pin Connector
- T6bd 6-Pin Connector
- T8x 8-Pin Connector
- T20f 20-Pin Connector
- V57 Front Passenger Door Central Locking System Motor
- V162 Front Passenger Central Locking -Safe- Motor
- V303 Front Passenger Closing Aid Motor
- R78 Door Contact Switch Connection 1 (in Front Passenger Door Wiring Harness)
- * For Vehicles Without Door Closing Aid
- *2 For Vehicles Without Adaptive Cruise Control (ACC)
- *3 Not for USA
- *4 For Vehicles with Door Closing Aid
- *5 For Vehicles with Adaptive Cruise Control (ACC)

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Protected by copyright. Reproduction for private or commercial purposes, in part or in whole, is not permitted without the express written consent of Audi AG. Audi AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by Audi AG.

Front Passenger Door Window Regulator Switch, Front Passenger Interior Locking Switch, Front Passenger Door Control Module


- E107 Front Passenger Door Window Regulator Switch
- E198 Front Passenger Interior Locking Switch
- J387 Front Passenger Door Control Module
- T4bo 4-Pin Connector
- T4bp 4-Pin Connector
- T32l 32-Pin Connector

268 Ground Connection 2 (in Front Passenger Door Wiring Harness)

R53 Connection 58S (in Front Passenger Door Wiring Harness)

Switch Ground Output

Protected by copyright. Copying for private or commercial purposes without the written permission of AUDI AG is prohibited. AUDI AG does not accept any liability with respect to the correctness of information in this document. Copyright AUDI AG

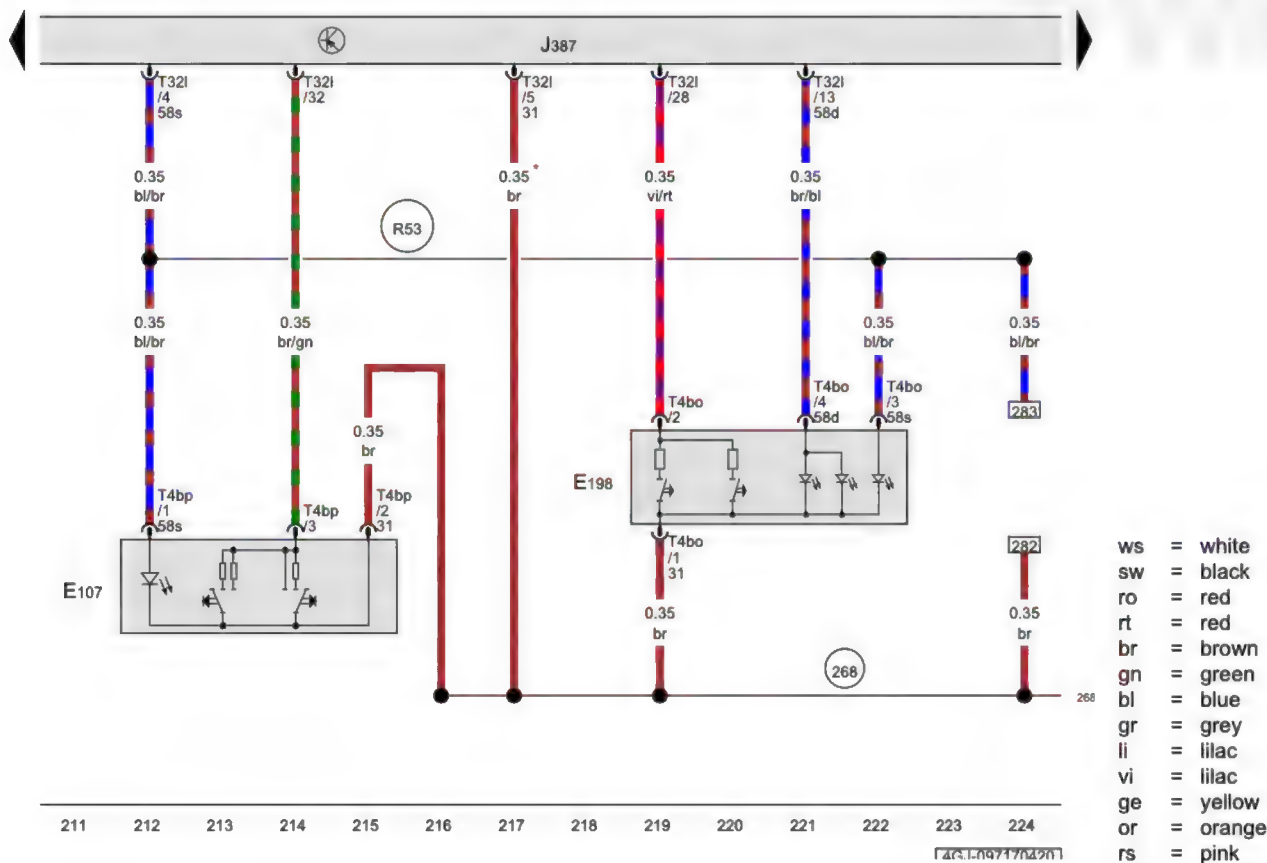


Front Passenger Door Control Module, Front Passenger Door Opener Illumination Bulb, Front Passenger Door Warning Lamp, Fiber Optic Cable for Right Front Sill Panel Ambient Lighting

- J387 Front Passenger Door Control Module
- L109 Front Passenger Door Opener Illumination Bulb
- T2ht 2-Pin Connector
- T2hu 2-Pin Connector
- T2hv 2-Pin Connector
- T2hx 2-Pin Connector
- T5ab 5-Pin Connector, In the Right Front Door
- T23b 23-Pin Connector, On the Right A-Pillar
- T32l 32-Pin Connector
- W32 Right Front Entry Lamp
- W36 Front Passenger Door Warning Lamp
- W68 Fiber Optic Cable for Right Front Sill Panel Ambient Lighting

268 Ground Connection 2 (in Front Passenger Door Wiring Harness)

R57 Entry Lamp Connection (in Front Passenger Door Wiring Harness)

- * Through May 2017
- *2 For Vehicles with Auxiliary Lamps
- *3 For Vehicles Without Auxiliary Lamps

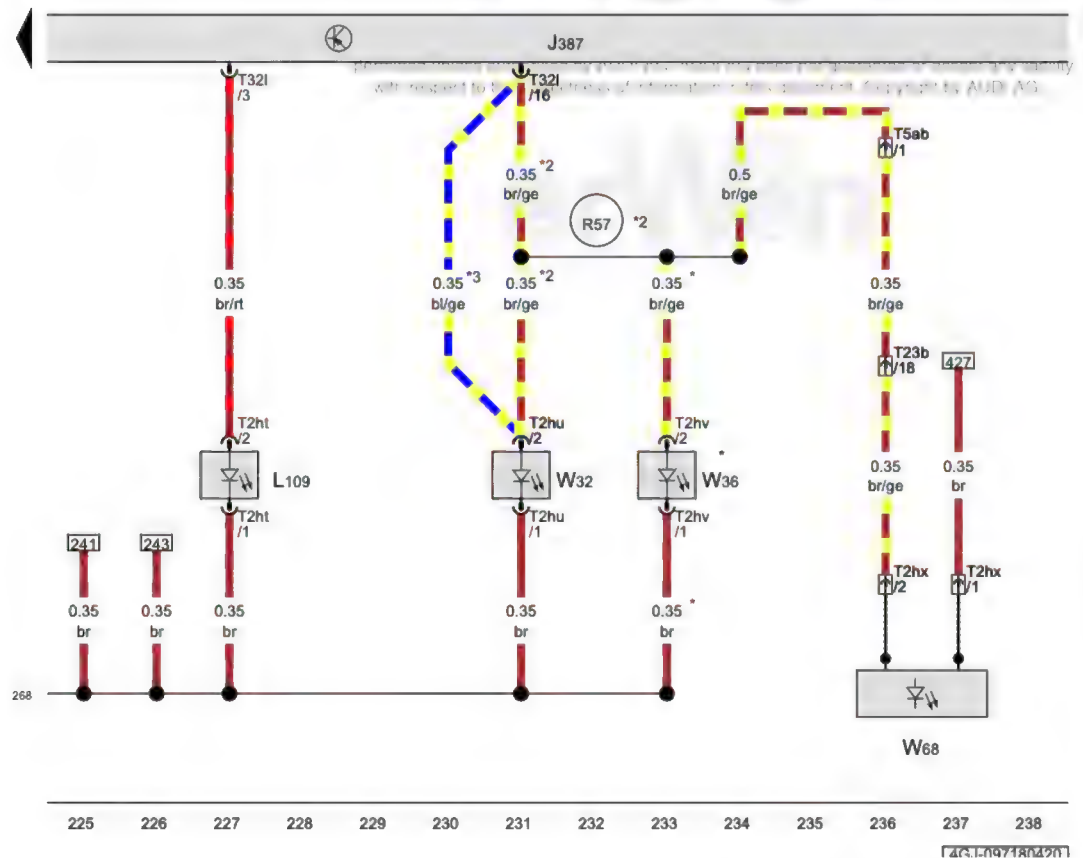


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Front Passenger Door Control Module, Front Passenger Door Storage Compartment Illumination Bulb, Right Front Exterior Door Handle Illumination Bulb, Front Passenger Door Ambient Lighting Bulb, Front Passenger Window Regulator Motor

- J387 Front Passenger Door Control Module
- L161 Front Passenger Door Storage Compartment Illumination Bulb
- L163 Right Front Exterior Door Handle Illumination Bulb
- L165 Front Passenger Door Ambient Lighting Bulb
- T2hq 2-Pin Connector
- T2hr 2-Pin Connector
- T2hw 2-Pin Connector
- T4bq 4-Pin Connector
- T6at 6-Pin Connector
- T32l 32-Pin Connector
- V148 Front Passenger Window Regulator Motor

R98 Connection 1 (in Front Passenger Door Wiring Harness)


* For Vehicles with Auxiliary Lamps

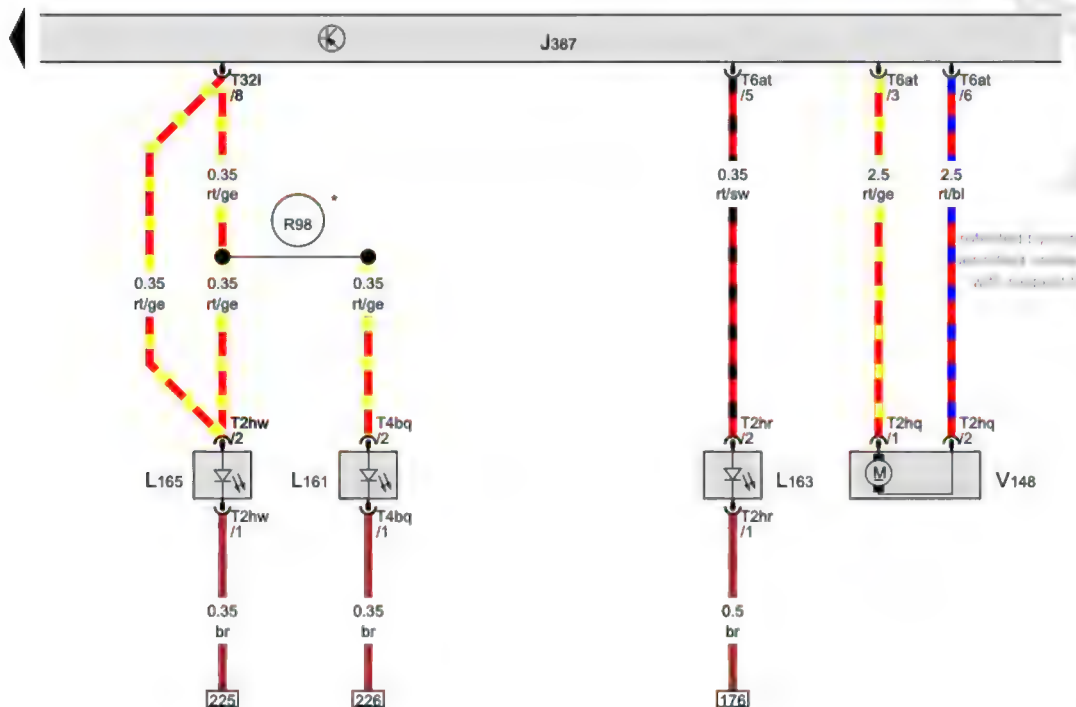

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Front Passenger Door Control Module, Front Passenger Exterior Rearview Mirror Turn Signal Bulb, Front Passenger Exterior Rearview Mirror, Front Passenger Side Mirror Adjustment Motor 2, Heated Front Passenger Exterior Rearview Mirror

- G516 Front Passenger Exterior Rearview Mirror Horizontal Position Sensor
- G517 Front Passenger Exterior Rearview Mirror Vertical Position Sensor
- J387 Front Passenger Door Control Module
- L132 Front Passenger Exterior Rearview Mirror Turn Signal Bulb
- T16m 16-Pin Connector
- VX5 Front Passenger Exterior Rearview Mirror
- V25 Front Passenger Side Mirror Adjustment Motor 2
- V122 Front Passenger Exterior Rearview Mirror Folding Motor
- V150 Front Passenger Mirror Adjustment Motor
- Z5 Heated Front Passenger Exterior Rearview Mirror
- * Optional Equipment
- *2 For Vehicles with Folding Mirrors

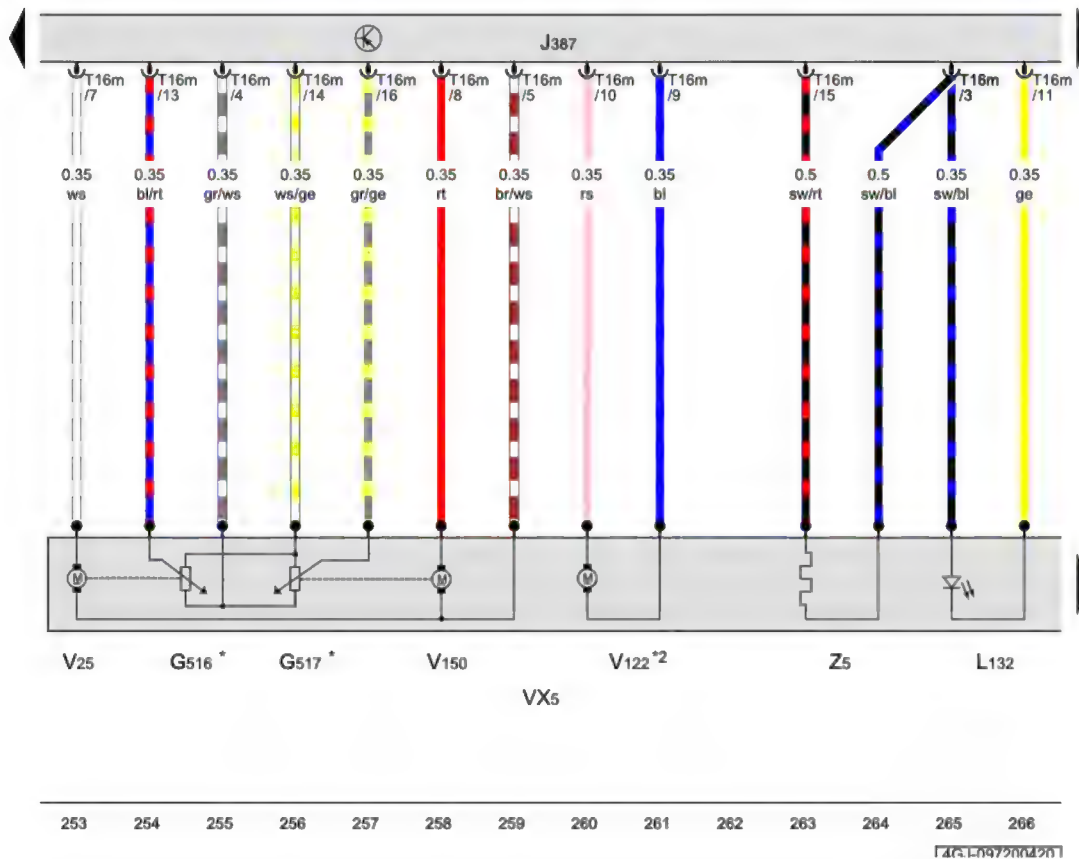

Protected by copyright. Copying for private or non-commercial purposes in part or in whole is not permitted. Printed and published by Audi AG. Audi AG does not guarantee the accuracy and liability with respect to the information in this document. Copyright by Audi AG.


Front Passenger Door Control Module, Front Passenger Exterior Rearview Mirror, Front Passenger Automatic Dimming Exterior Rearview Mirror

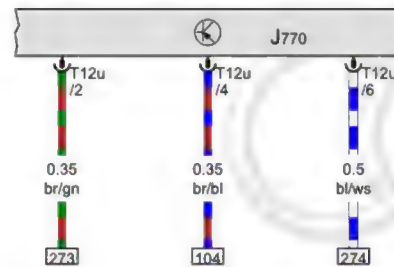

- J387 Front Passenger Door Control Module
- J770 Lane Change Assistance Control Module 2
- K234 Lane Change Assistance Warning Lamp in Front Passenger Exterior Rearview Mirror
- T2eu 2-Pin Connector, In the Front Passenger Door
- T2ew 2-Pin Connector
- T12u 12-Pin Connector
- T16m 16-Pin Connector
- T23b 23-Pin Connector, In the Right D-Pillar
- VX5 Front Passenger Exterior Rearview Mirror
- Y21 Front Passenger Automatic Dimming Exterior Rearview Mirror

B564 Connection 31 (in Main Wiring Harness)

* For Vehicles with Automatic Dimming Exterior Rearview Mirror

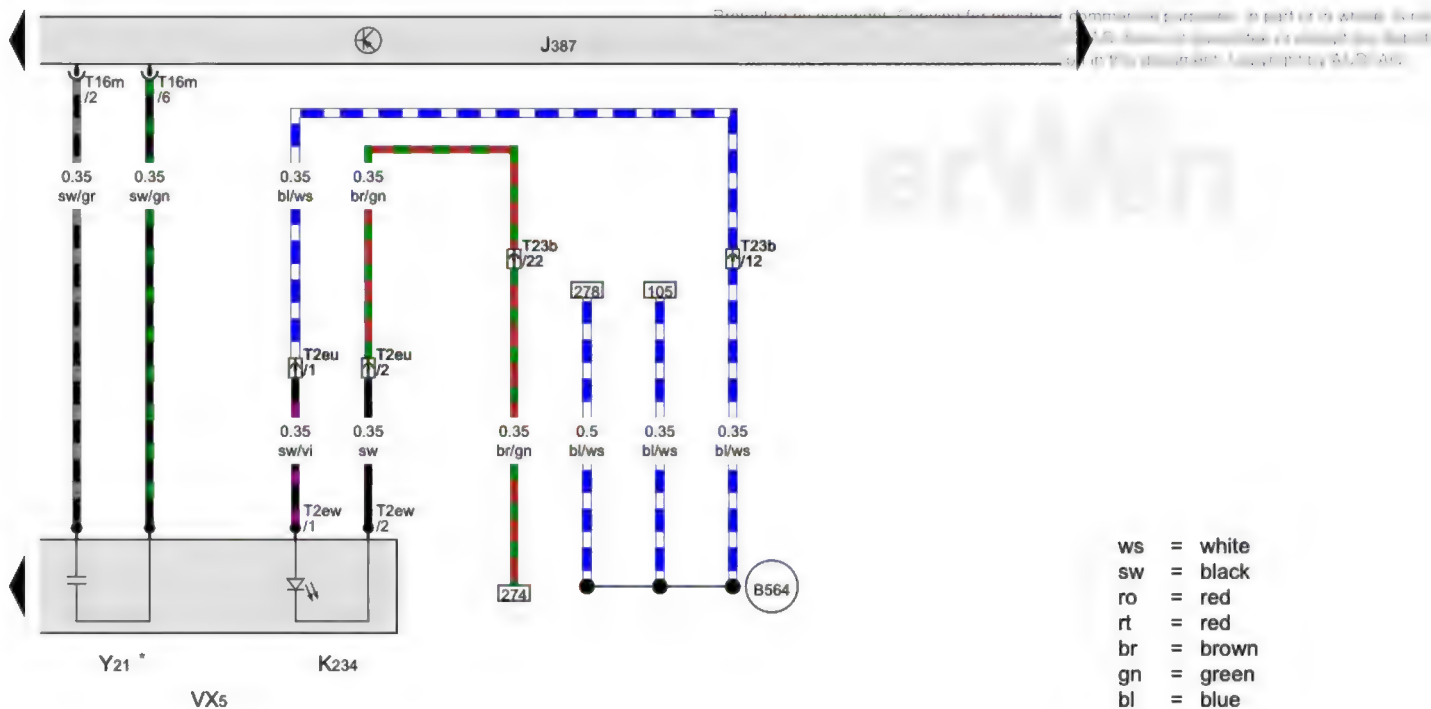


267 268 269 270 271 272 273 274 275 276 277 278 279 280

14511097210201


Front Passenger Memory Seat Control Head, Front Passenger Door Control Module

- E277 Front Passenger Memory Seat Control Head
- E338 Memory Seat Positions 1 and 2 Button
- E340 Front Passenger Memory Seat Button
- E466 Passenger Side Emergency -Off- Button
- J387 Front Passenger Door Control Module
- T10r 10-Pin Connector
- T32i 32-Pin Connector

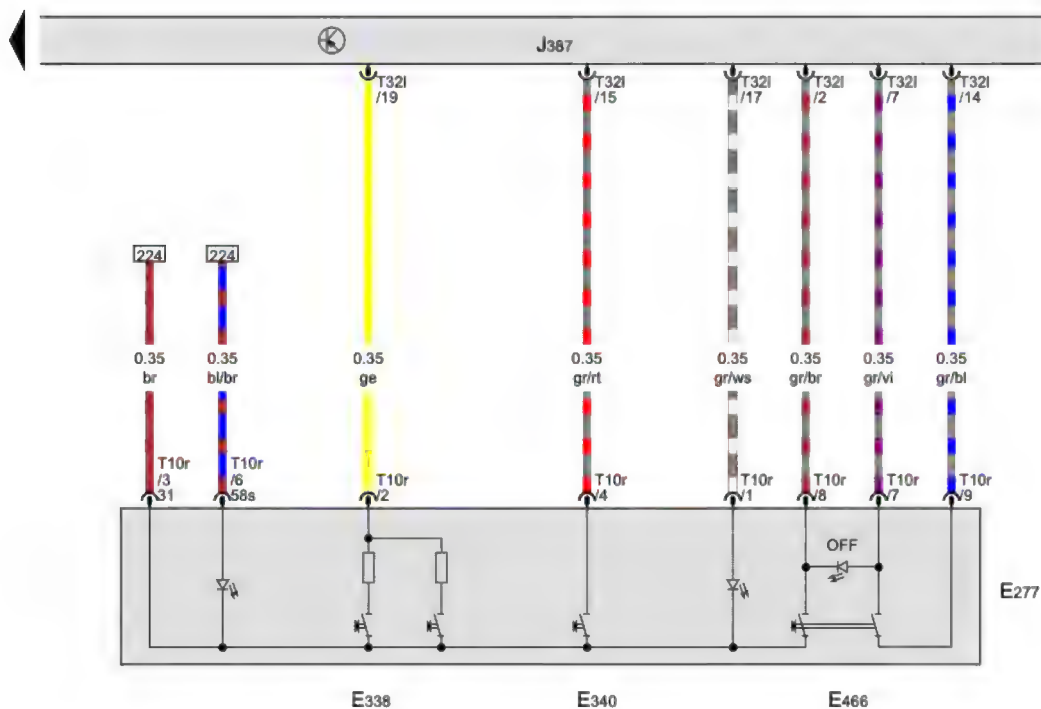

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Left Rear Central Locking Lock Unit, Left Rear Exterior Door Handle Touch Sensor, Left Rear Door Control Module, Left Rear Closing Aid Motor

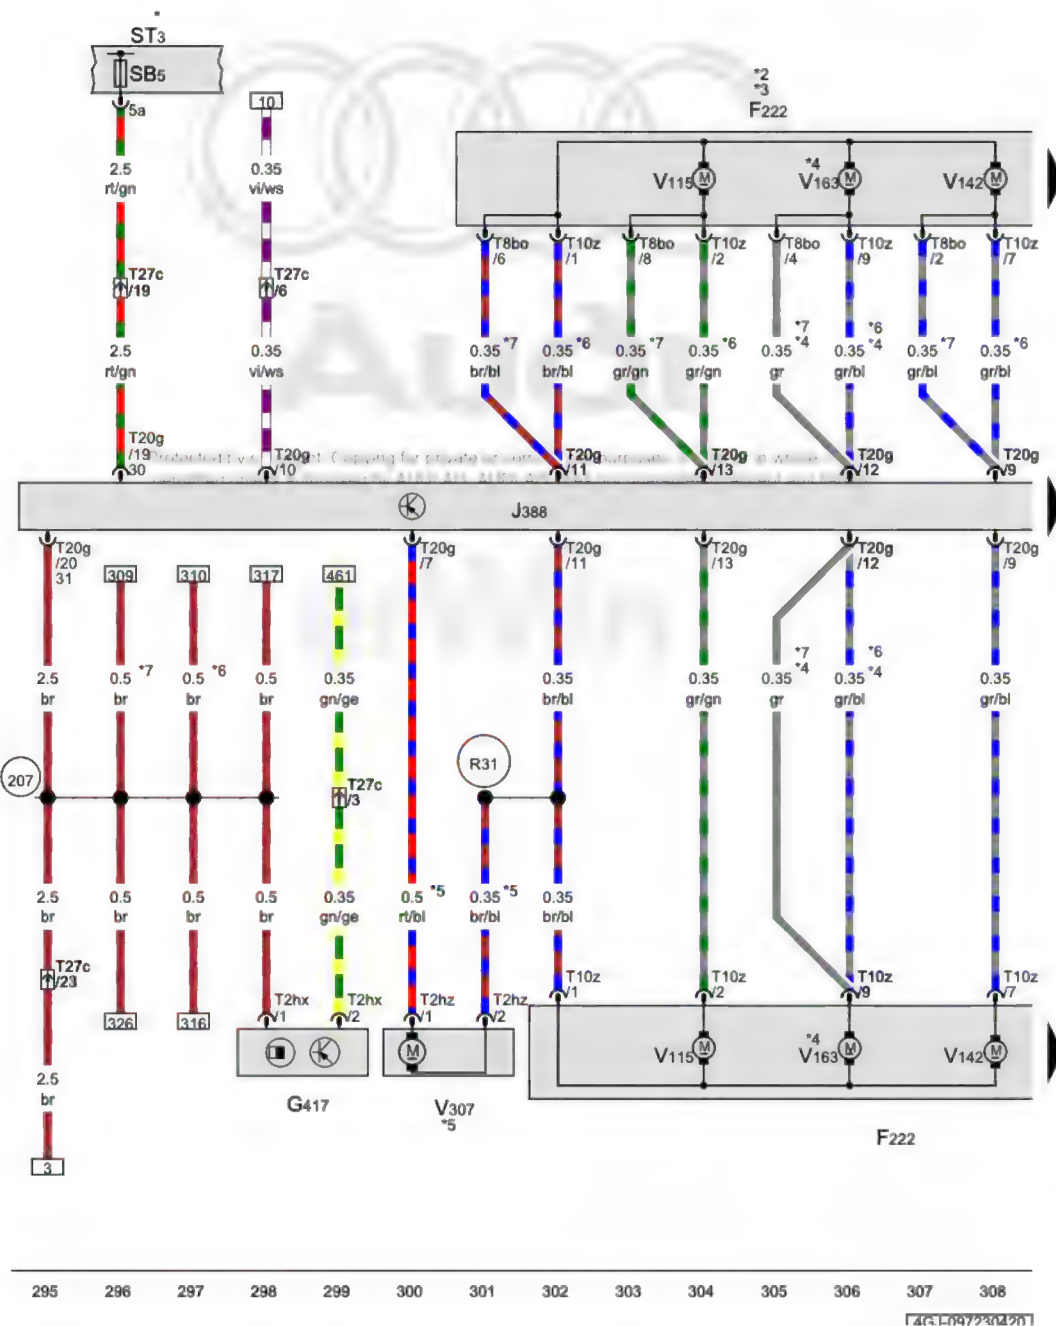

- F222 Left Rear Central Locking Lock Unit
- G417 Left Rear Exterior Door Handle Touch Sensor
- J388 Left Rear Door Control Module
- ST3 Fuse Panel 3
- SB5 Fuse 5 (On Fuse Panel B)
- T2hx 2-Pin Connector
- T2hz 2-Pin Connector
- T8bo 8-Pin Connector, Black
- T10z 10-Pin Connector
- T20g 20-Pin Connector
- T27c 27-Pin Connector, On the Left B-Pillar
- V115 Left Rear Central Locking System Motor
- V142 Left Rear Child Safety Lock Motor
- V163 Left Rear Central Locking -Safe- Motor
- V307 Left Rear Closing Aid Motor

207 Ground Connection (in Left Rear Door Wiring Harness)

R31 Connection 1 (in Left Rear Door Wiring Harness)


- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 For Vehicles Without Door Closing Aid
- *3 For Vehicles Without Adaptive Cruise Control (ACC)
- *4 Not for USA
- *5 For Vehicles with Door Closing Aid
- *6 Through November 2015
- *7 From November 2015

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Left Rear Central Locking Lock Unit, Left Rear Door Control Module

- F10 Left Rear Door Contact Switch
- F132 Left Rear Central Locking System Actuator
- F222 Left Rear Central Locking Lock Unit
- F340 Left Rear Door Closing Aid Contact Switch
- F344 Left Rear Child Safety Lock Contact Switch
- J388 Left Rear Door Control Module
- T3aw 3-Pin Connector
- T8bo 8-Pin Connector, Black
- T10z 10-Pin Connector
- T20g 20-Pin Connector

- * Through November 2015
- *2 For Vehicles Without Door Closing Aid
- *3 For Vehicles with Adaptive Cruise Control (ACC)
- *4 For Vehicles with Door Closing Aid
- *5 From November 2015

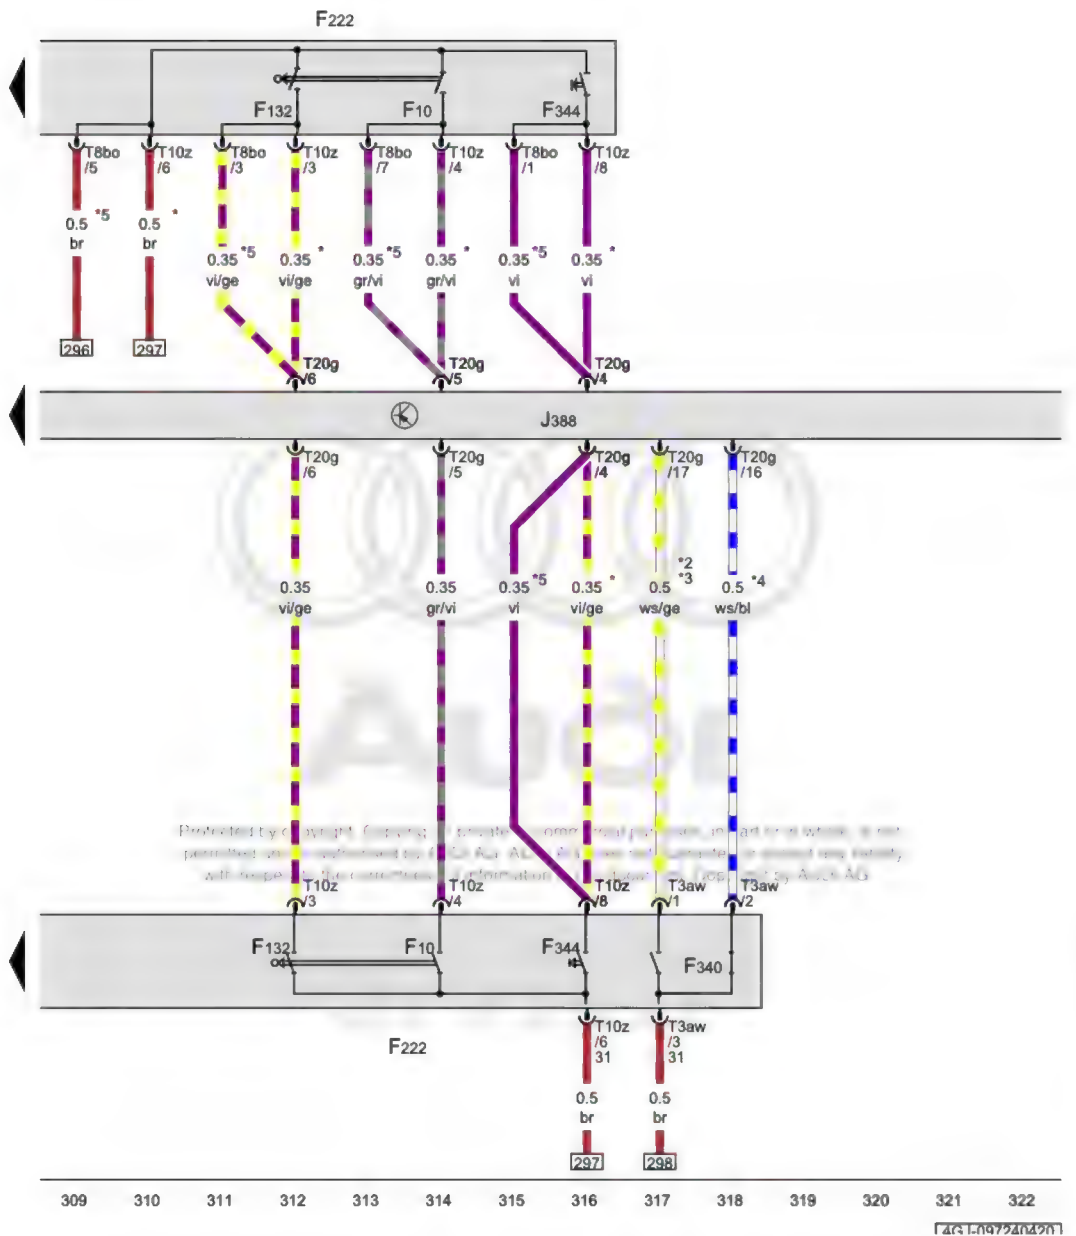

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink


Left Rear Power Window Button in Left Rear Door, Left Rear Door Control Module, Left Rear Exterior Door Handle Illumination Bulb, Left Rear Window Regulator Motor

- E700 Left Rear Power Window Button in Left Rear Door
- E701 Right Rear Power Window Button in Left Rear Door
- J388 Left Rear Door Control Module
- L168 Left Rear Exterior Door Handle Illumination Bulb
- T2ia 2-Pin Connector
- T2ic 2-Pin Connector
- T4br 4-Pin Connector
- T6au 6-Pin Connector
- T16n 16-Pin Connector
- T20g 20-Pin Connector
- V26 Left Rear Window Regulator Motor

408 Ground Connection 3 (in Left Rear Door Wiring Harness)

R54 Connection 58S (in Left Rear Door Wiring Harness)

- * Switch Ground Output
- *2 For Vehicles Without Auxiliary Lamps

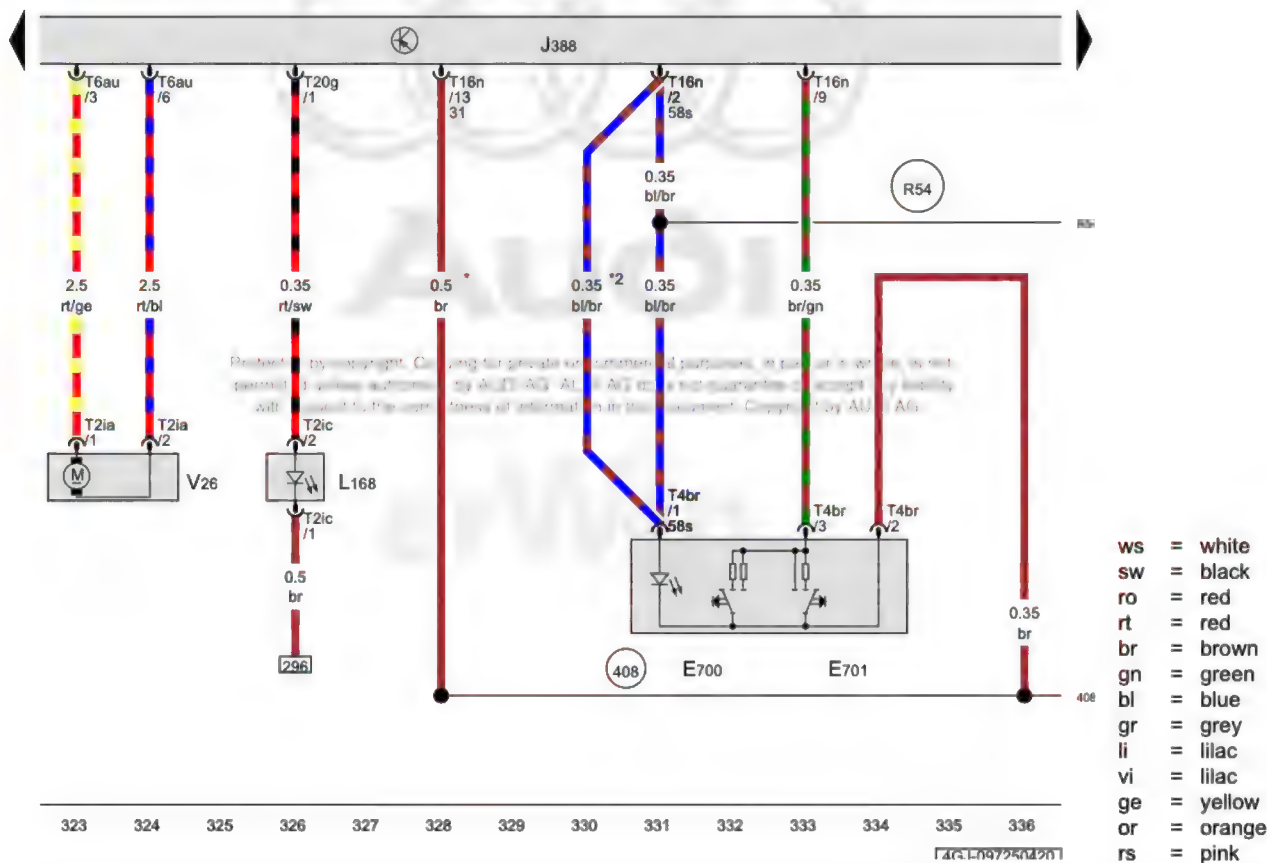





Left Rear Door Control Module, Left Rear Door Ambient Lighting Bulb, Left Rear Door Storage Compartment Illumination Bulb, Left Rear Entry Lamp, Left Rear Door Warning Lamp, Fiber Optic Cable for Left Rear Sill Panel Ambient Lighting

- J388 Left Rear Door Control Module
- L166 Left Rear Door Ambient Lighting Bulb
- L170 Left Rear Door Storage Compartment Illumination Bulb
- T2ih 2-Pin Connector
- T2ii 2-Pin Connector
- T2ik 2-Pin Connector
- T2iq 2-Pin Connector
- T4bt 4-Pin Connector
- T5ac 5-Pin Connector, In the Left Rear Door
- T16n 16-Pin Connector
- T27c 27-Pin Connector, On the Left B-Pillar
- W33 Left Rear Entry Lamp
- W37 Left Rear Door Warning Lamp
- W69 Fiber Optic Cable for Left Rear Sill Panel Ambient Lighting

- 408 Ground Connection 3 (in Left Rear Door Wiring Harness)
- R31 Connection 1 (in Left Rear Door Wiring Harness)
- R58 Entry Lamp Connection (in Left Rear Door Wiring Harness)
- * Through May 2017
- *2 For Vehicles with Auxiliary Lamps

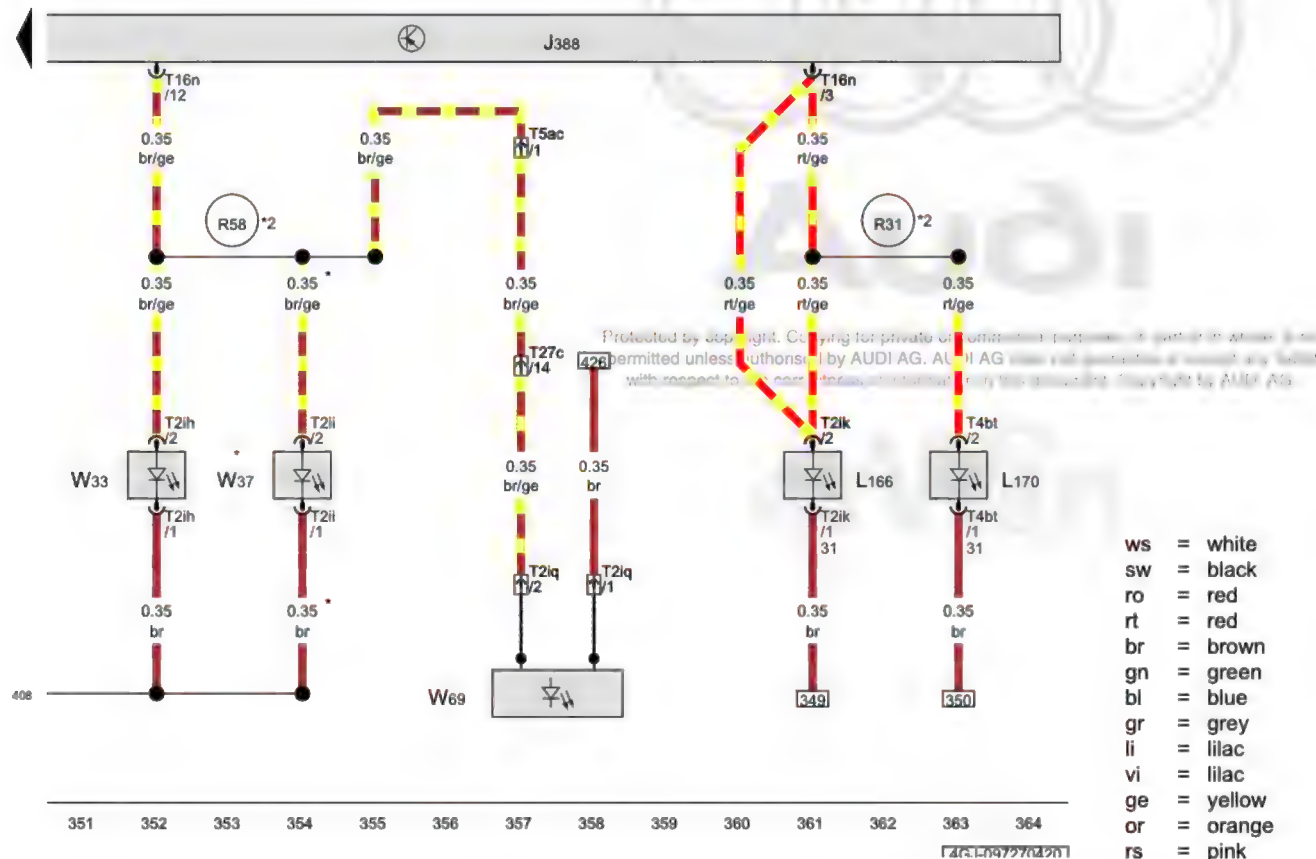

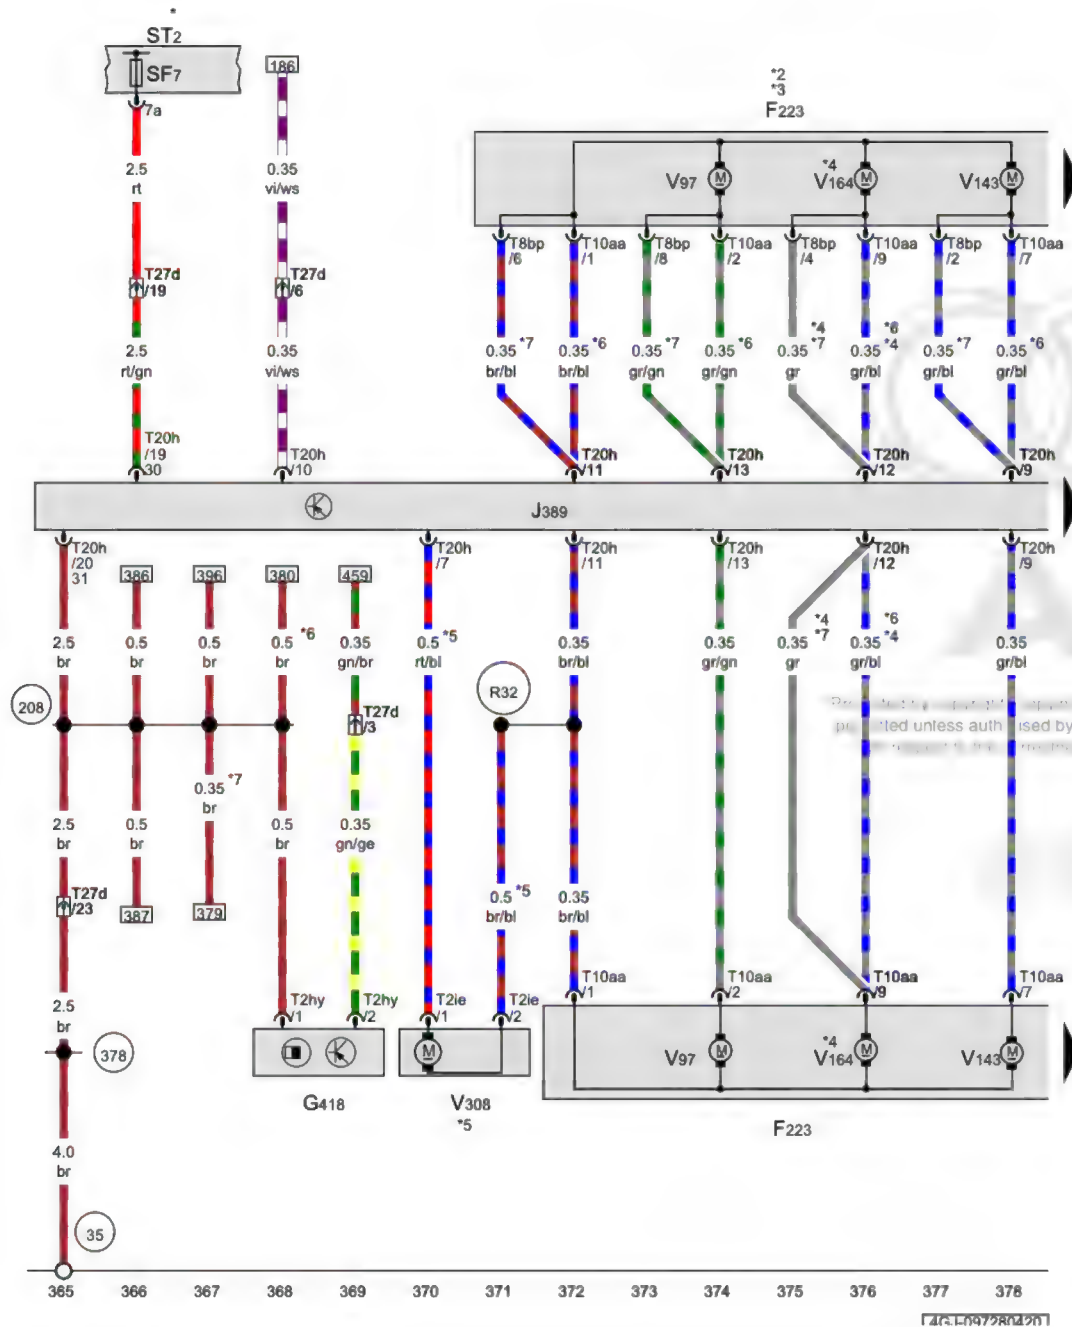

Right Rear Central Locking Lock Unit, Right Rear Exterior Door Handle Touch Sensor, Right Rear Door Control Module

- F223 Right Rear Central Locking Lock Unit
- G418 Right Rear Exterior Door Handle Touch Sensor
- J389 Right Rear Door Control Module
- ST2 Fuse Panel 2
- SF7 Fuse 7 (On Fuse Panel F)
- T2hy 2-Pin Connector
- T2ie 2-Pin Connector
- T8bp 8-Pin Connector, Black
- T10aa 10-Pin Connector
- T20h 20-Pin Connector
- T27d 27-Pin Connector, On the Right B-Pillar
- V97 Right Rear Door Central Locking System Motor
- V143 Right Rear Child Safety Lock Motor
- V164 Right Rear Central Locking -Safe- Motor
- V308 Right Rear Closing Aid Motor

- 35 Ground Connection Under Front Passenger Seat
- 208 Ground Connection (in Right Rear Door Wiring Harness)
- 378 Ground Connection 13 (in Main Wiring Harness)
- R32 Connection 2 (in Right Rear Door Wiring Harness)
- Refer to Applicable Wiring Diagram for Fuse Positions
- *2 For Vehicles Without Door Closing Aid
- *3 For Vehicles Without Adaptive Cruise Control (ACC)
- *4 Not for USA
- *5 For Vehicles with Door Closing Aid
- *6 Through November 2015
- *7 From November 2015

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink




- * Through November 2015
- *2 For Vehicles Without Door Closing Aid
- *3 For Vehicles with Adaptive Cruise Control (ACC)
- *4 For Vehicles with Door Closing Aid
- *5 From November 2015

Right Rear Power Window Button in Right Rear Door, Right Rear Door Control Module, Right Rear Ashtray Illumination Bulb, Right Rear Exterior Door Handle Illumination Bulb, Right Rear Window Regulator Motor

- E705 Right Rear Power Window Button in Right Rear Door
- E706 Left Rear Power Window Button in Right Rear Door
- J389 Right Rear Door Control Module
- L49 Right Rear Ashtray Illumination Bulb
- L169 Right Rear Exterior Door Handle Illumination Bulb
- T2ib 2-Pin Connector
- T2id 2-Pin Connector
- T2il 2-Pin Connector
- T4bu 4-Pin Connector
- T6av 6-Pin Connector
- T16o 16-Pin Connector
- T20h 20-Pin Connector
- V27 Right Rear Window Regulator Motor

- 409 Ground Connection 3 (in Right Rear Door Wiring Harness)
- R55 Connection 58S (in Right Rear Door Wiring Harness)
 - * Switch Ground Output

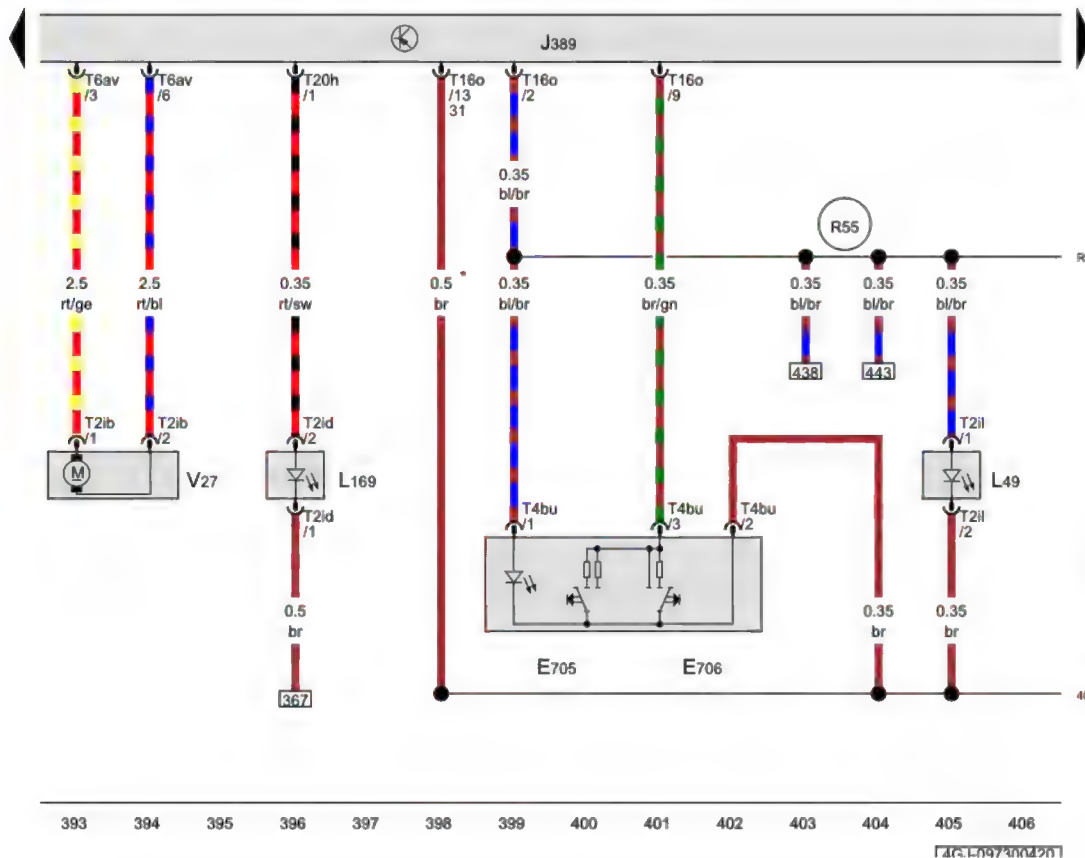

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Right Rear Door Control Module, Right Rear Door Opener Illumination Bulb, Right Rear Door Warning Lamp

- E274 Right Rear Interior Locking Switch
- J389 Right Rear Door Control Module
- L111 Right Rear Door Opener Illumination Bulb
- T2im 2-Pin Connector
- T2in 2-Pin Connector
- T2io 2-Pin Connector
- T4bv 4-Pin Connector
- T16o 16-Pin Connector
- W34 Right Rear Entry Lamp
- W38 Right Rear Door Warning Lamp

409 Ground Connection 3 (in Right Rear Door Wiring Harness)


R55 Connection 58S (in Right Rear Door Wiring Harness)

R59 Entry Lamp Connection (in Right Rear Door Wiring Harness)

* For USA Only

*2 Through May 2017

*3 For Vehicles with Auxiliary Lamps

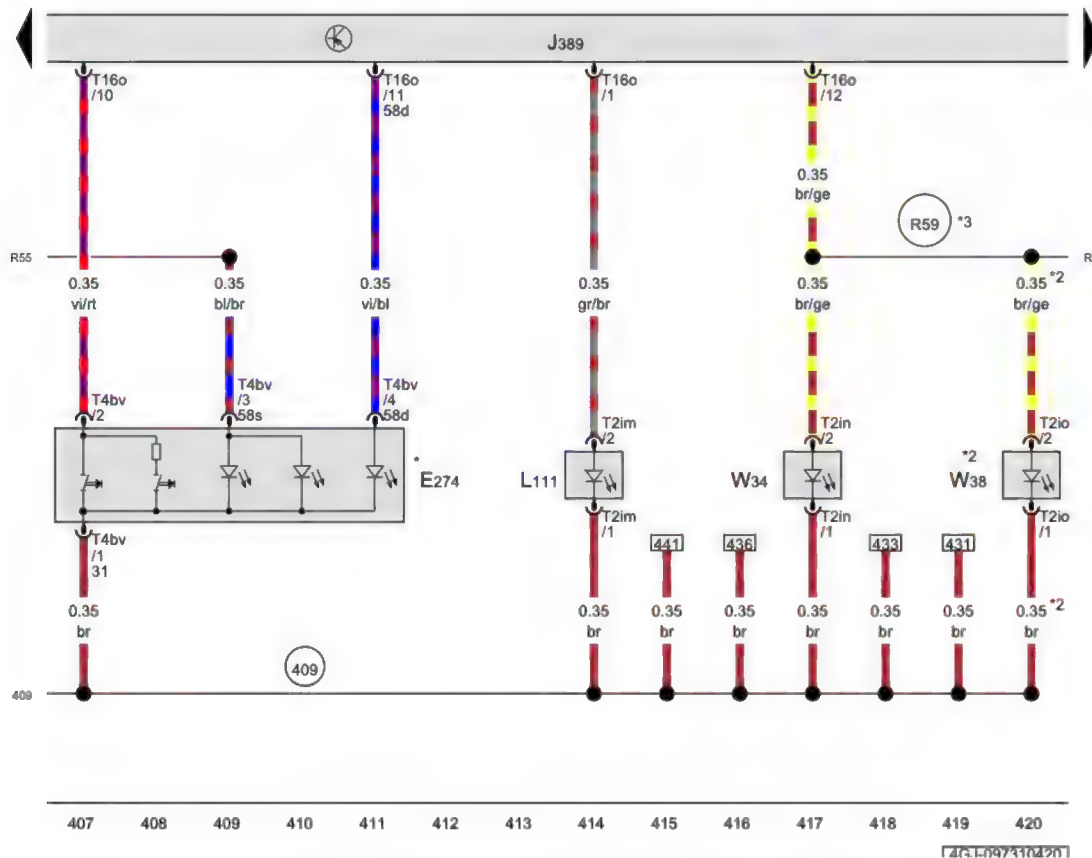

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the written consent of AUDI AG. AUDI AG does not guarantee the correctness of the information in this document. Copyright by AUDI AG.




Audi

Right Rear Door Control Module, Right Rear Door Ambient Lighting Bulb, Right Rear Door Storage Compartment Illumination Bulb, Fiber Optic Cable for Right Rear Sill Panel Ambient Lighting

- J389 Right Rear Door Control Module
- L167 Right Rear Door Ambient Lighting Bulb
- L171 Right Rear Door Storage Compartment Illumination Bulb
- T2ip 2-Pin Connector
- T2ir 2-Pin Connector
- T4bw 4-Pin Connector
- T5ad 5-Pin Connector, In the Right Rear Door
- T16o 16-Pin Connector
- T27d 27-Pin Connector, On the Right B-Pillar
- W70 Fiber Optic Cable for Right Rear Sill Panel Ambient Lighting


- 376 Ground Connection 11 (in Main Wiring Harness)
- 688 Ground Connection 2 on Center Tunnel
- R59 Entry Lamp Connection (in Right Rear Door Wiring Harness)
- R90 Connection 1 (in Right Rear Door Wiring Harness)
- * For Vehicles with Auxiliary Lamps

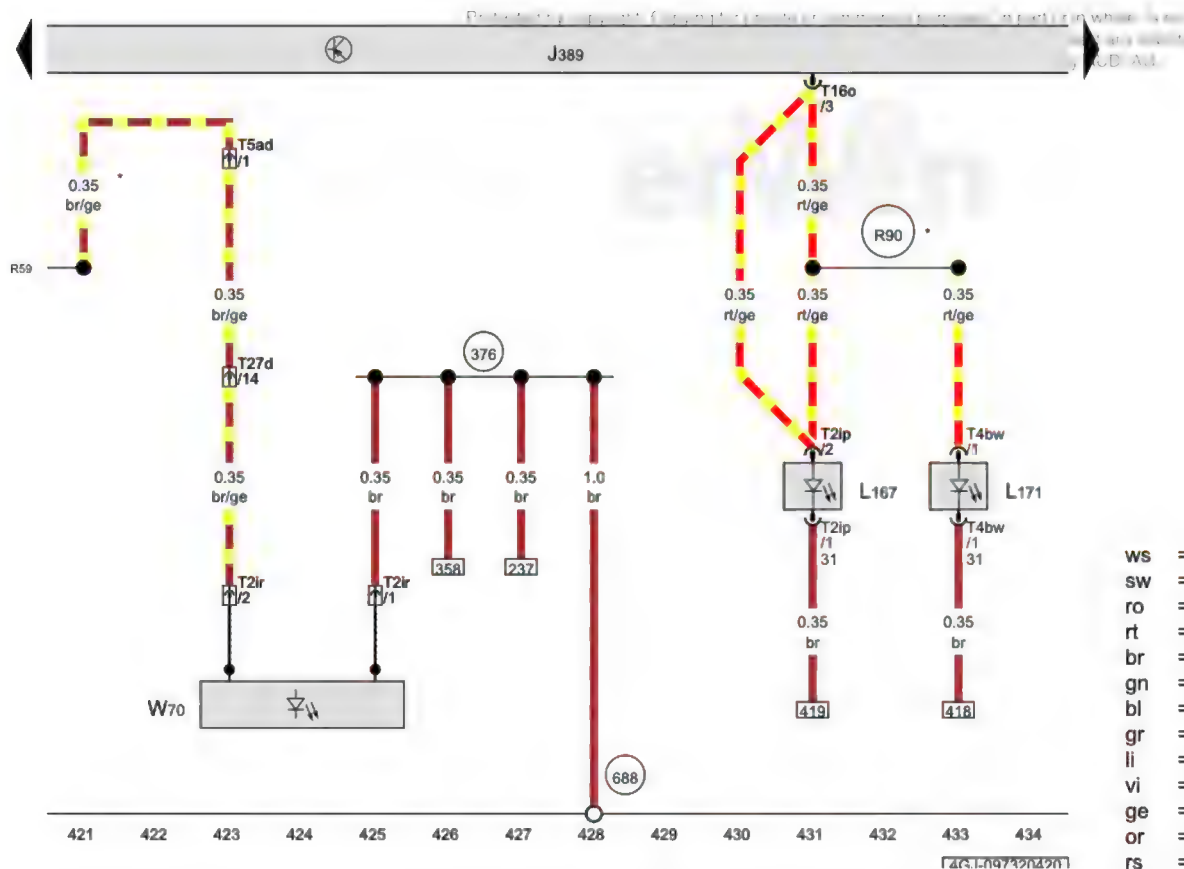

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = lilac
 vi = lilac
 ge = yellow
 or = orange
 rs = pink

Backrest Adjustment Button, Front Passenger Seat
Forward/Back Adjustment Button, Right Rear Door Control
Module


- E425 Backrest Adjustment Button
- E603 Front Passenger Seat Forward/Back Adjustment Button
- J389 Right Rear Door Control Module
- T4ez 4-Pin Connector
- T4fa 4-Pin Connector
- T16o 16-Pin Connector
- * Depending on Equipment

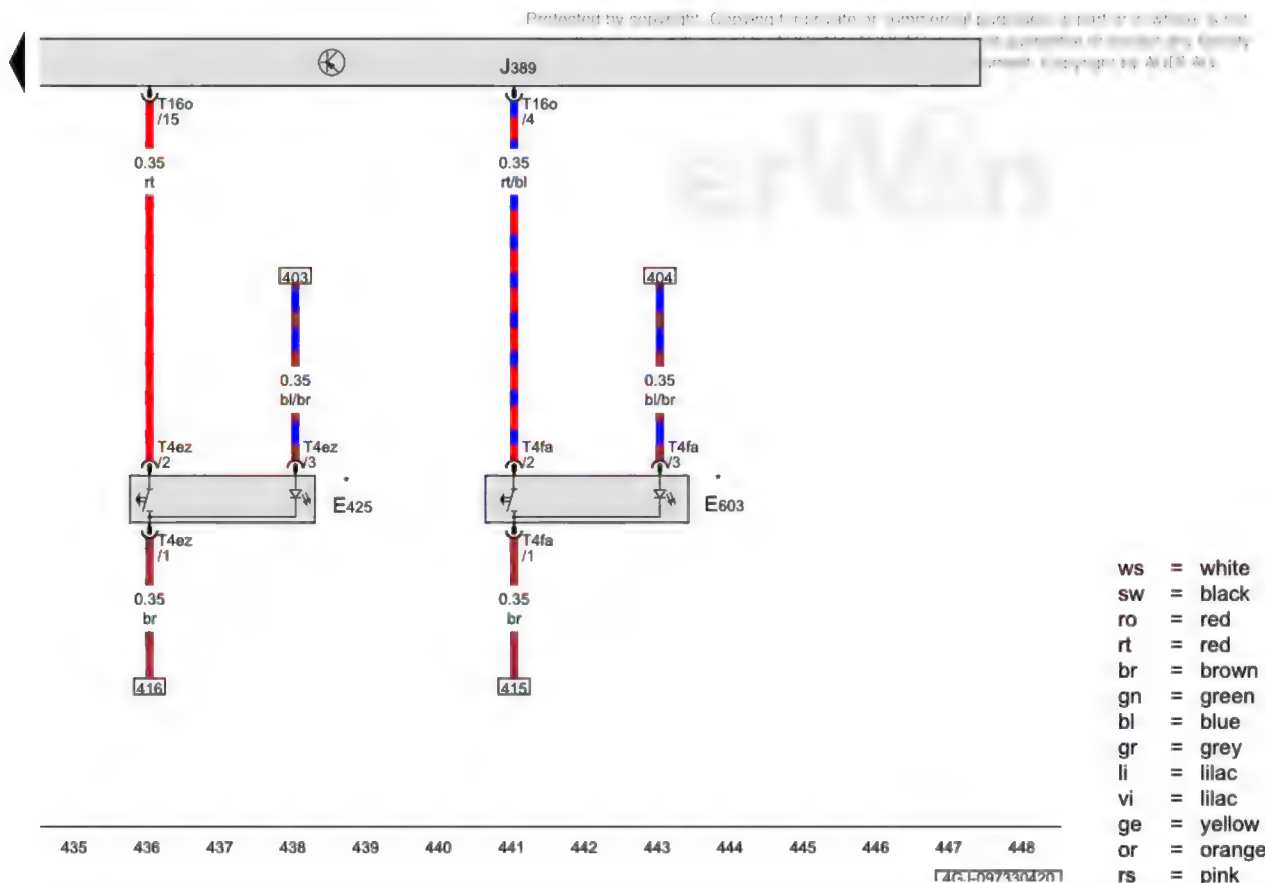

Comfort System Central Control Module

- J393 Comfort System Central Control Module
- ST1 Fuse Panel 1
- ST2 Fuse Panel 2
- SF7 Fuse 7 (On Fuse Panel F)
- SF8 Fuse 8 (On Fuse Panel F)
- T17r 17-Pin Connector
- T17s 17-Pin Connector
- T32h 32-Pin Connector
- T32i 32-Pin Connector

- 51 Ground Connection in Luggage Compartment, Right
- 384 Ground Connection 19 (in Main Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions

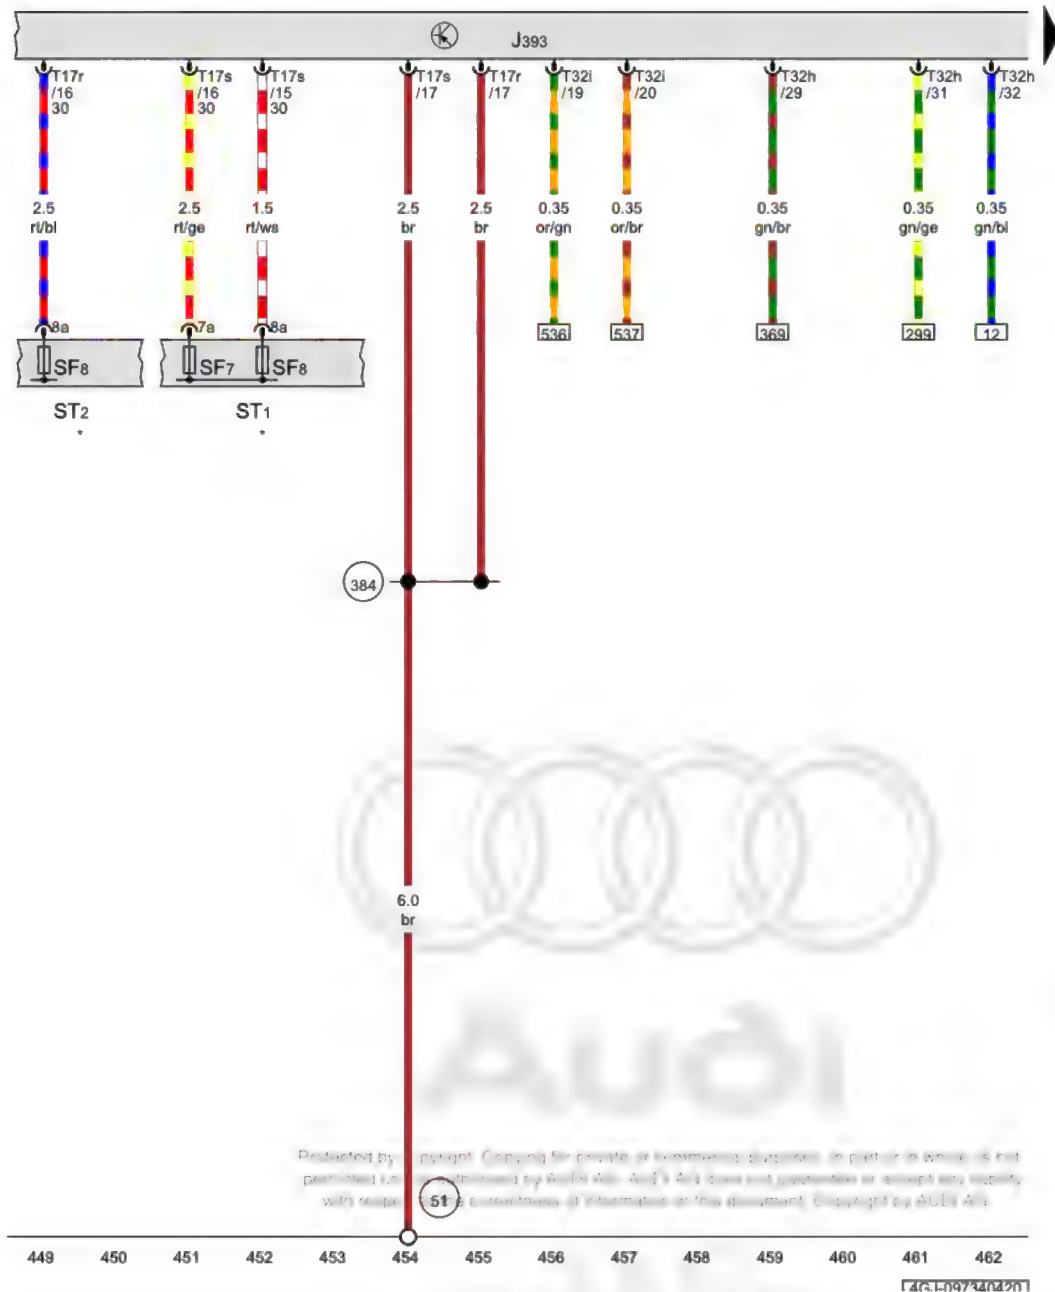


Anti-Theft Alarm System Sensor, Alarm Horn, Comfort System Central Control Module


- G273 Interior Monitoring Sensor
- G384 Vehicle Inclination Sensor
- G578 Anti-Theft Alarm System Sensor
- H12 Alarm Horn
- J393 Comfort System Central Control Module
- ST2 Fuse Panel 2
- SB6 Fuse 6 (On Fuse Panel B)
- T3n 3-Pin Connector
- T4v 4-Pin Connector
- T32i 32-Pin Connector

- 44 Ground Connection on A-Pillar, Lower Left
- 366 Ground Connection 1 (in Main Wiring Harness)
- 367 Ground Connection 2 (in Main Wiring Harness)
- 370 Ground Connection 5 (in Main Wiring Harness)
- B519 Central Locking/Anti-Theft Alarm System/Infrared Connection (30a) (in Main Wiring Harness)
- B699 LIN Bus Connection 4 (in Main Wiring Harness)
- * Anti-Theft Alarm System with Interior Monitoring
- *2 Refer to Applicable Wiring Diagram for Fuse Positions

Respect the copyright. Copying or reproduction of any part of this document is not permitted without the written permission of AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

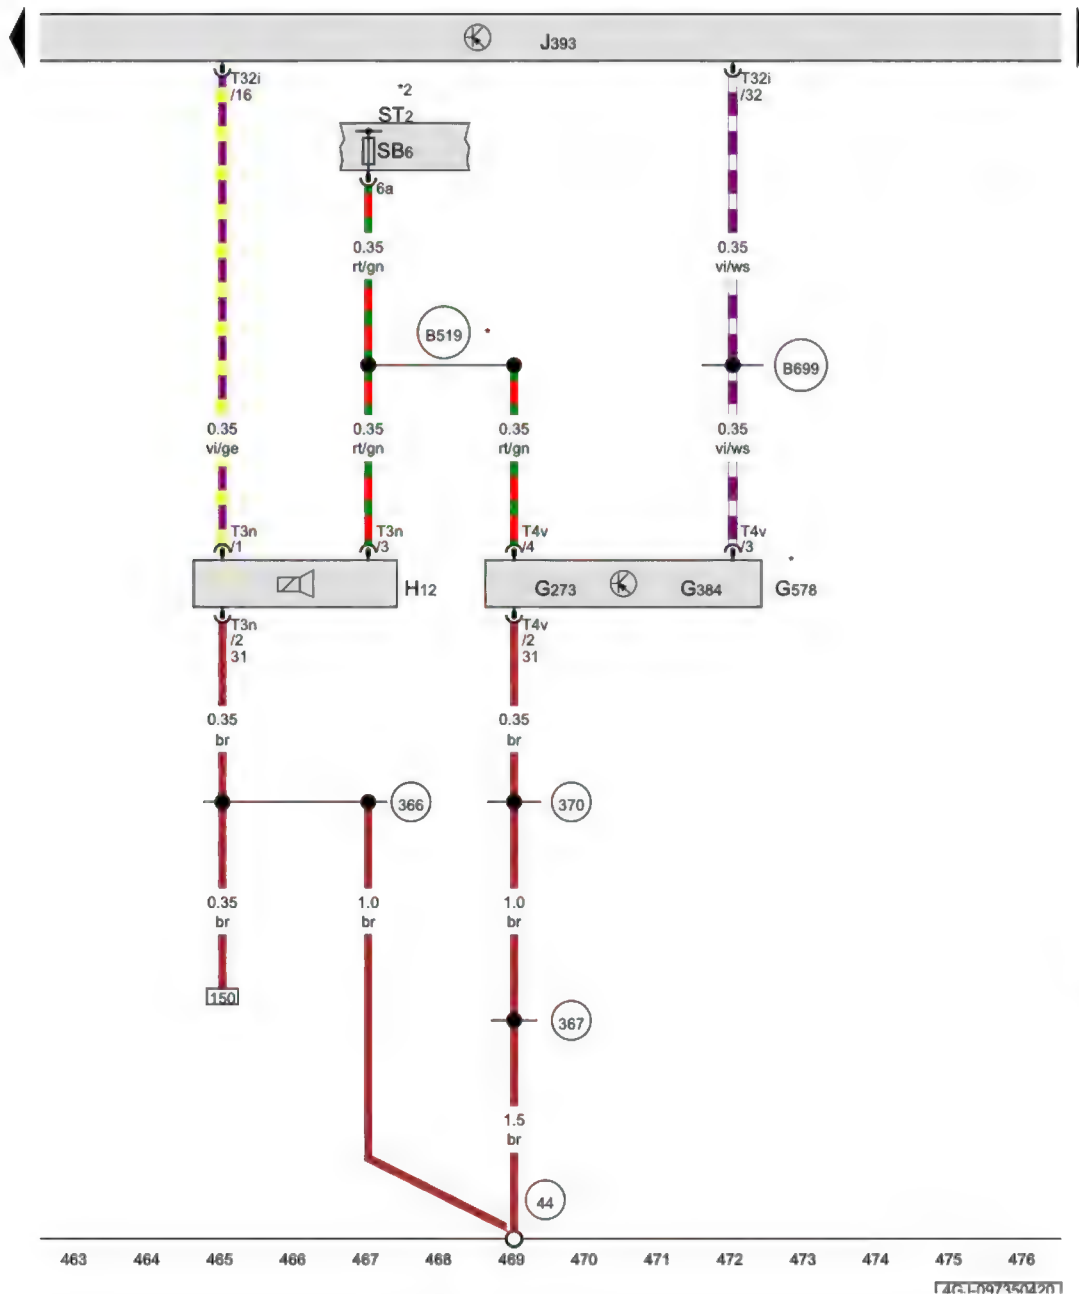

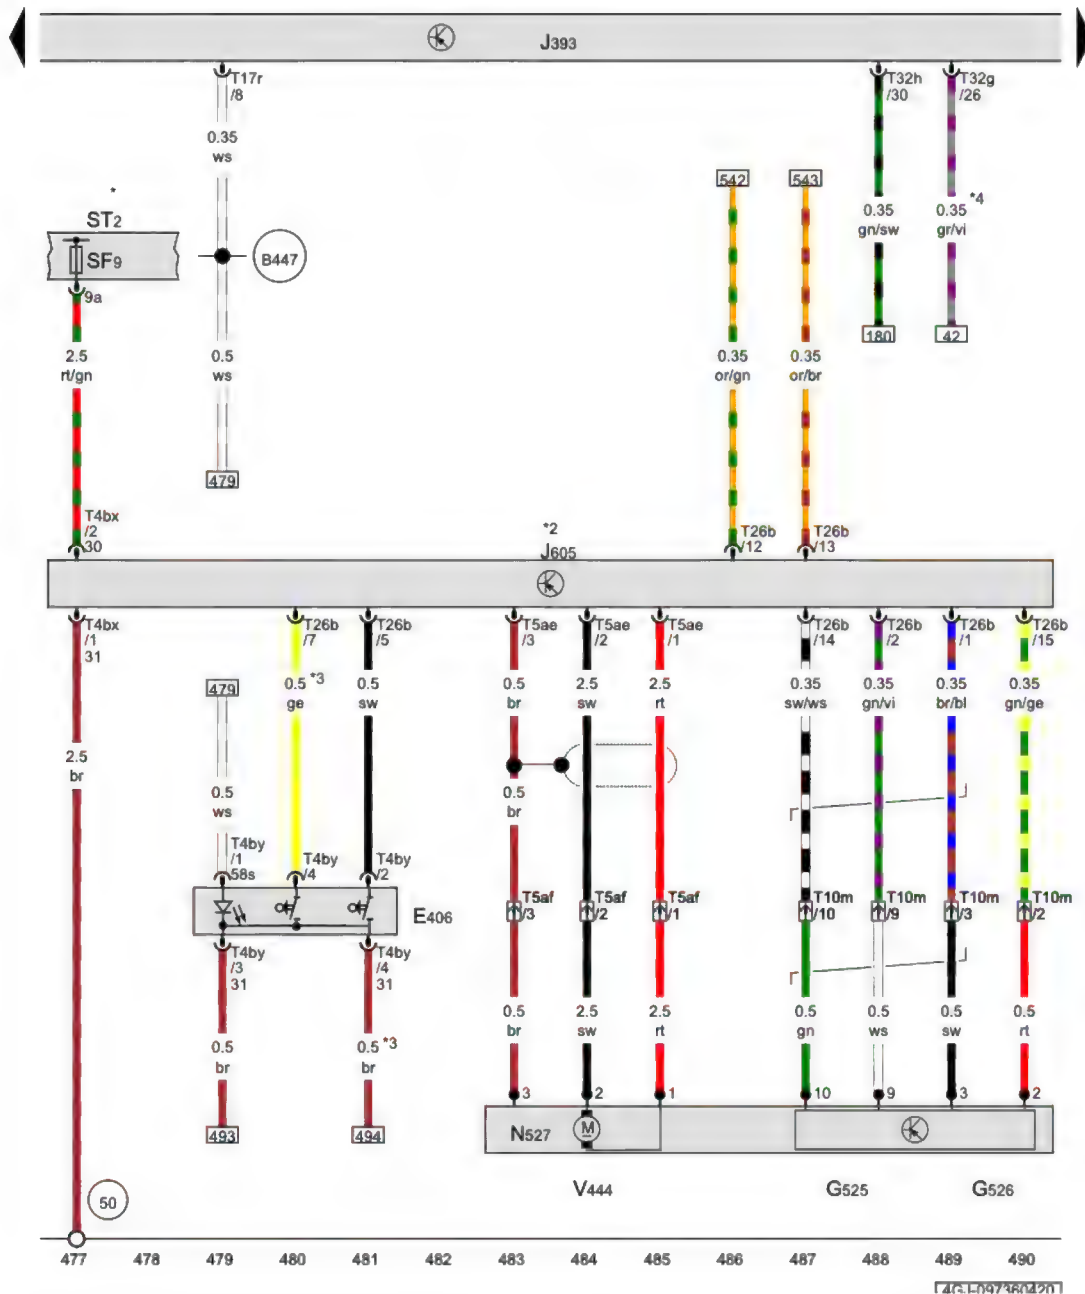

Rear Lid Lock Button in Luggage Compartment, Rear Lid -Closed- Sensor 1, Rear Lid -Closed- Sensor 2, Comfort System Central Control Module, Rear Lid Control Module, Rear Lid Motor 1

- E406 Rear Lid Lock Button in Luggage Compartment
- G525 Rear Lid -Closed- Sensor 1
- G526 Rear Lid -Closed- Sensor 2
- J393 Comfort System Central Control Module
- J605 Rear Lid Control Module
- N527 Coupling in Rear Lid Motor 1
- ST2 Fuse Panel 2
- SF9 Fuse 9 (On Fuse Panel F)
- T4bx 4-Pin Connector
- T4by 4-Pin Connector
- T5ae 5-Pin Connector
- T5af 5-Pin Connector
- T10m 10-Pin Connector
- T17r 17-Pin Connector
- T26b 26-Pin Connector
- T32g 32-Pin Connector
- T32h 32-Pin Connector
- V444 Rear Lid Motor 1

50 Ground Connection in Luggage Compartment, Left

B447 Luggage Compartment Lamp Connection (in Main Wiring Harness)


* Refer to Applicable Wiring Diagram for Fuse Positions

2 Sedan

3 Depending on Equipment

4 For Vehicles with Hybrid Drive

This technical document is only valid for the purpose of repair and maintenance. It is not a contract. The AG does not assume any liability for damages of any kind. This document is the property of AUDI AG.

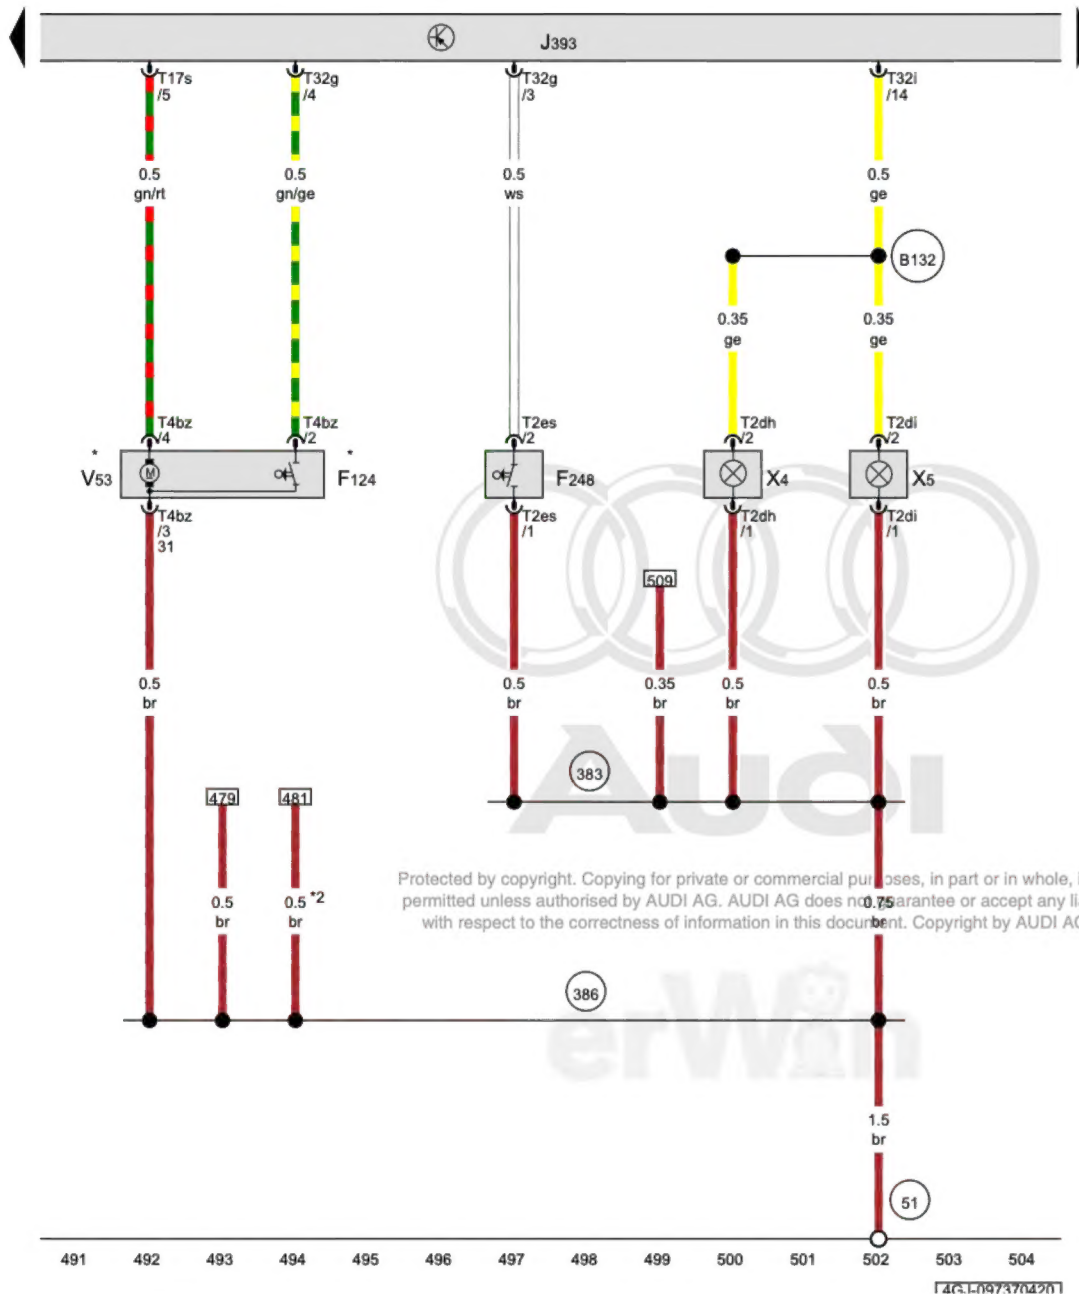


Rear Lid Lock Cylinder Unlock Button, Comfort System Central Control Module, Rear Lid Central Locking System Motor, Left License Plate Lamp, Right License Plate Lamp

- F124 Rear Lid Lock Cylinder/Anti-Theft Alarm/Central Locking Contact Switch
- F248 Rear Lid Lock Cylinder Unlock Button
- J393 Comfort System Central Control Module
- T2dh 2-Pin Connector
- T2di 2-Pin Connector
- T2es 2-Pin Connector
- T4bz 4-Pin Connector
- T17s 17-Pin Connector
- T32g 32-Pin Connector
- T32i 32-Pin Connector
- V53 Rear Lid Central Locking System Motor
- X4 Left License Plate Lamp
- X5 Right License Plate Lamp

- 51 Ground Connection in Luggage Compartment, Right
- 383 Ground Connection 18 (in Main Wiring Harness)
- 386 Ground Connection 21 (in Main Wiring Harness)
- B132 License Plate Lamp Connection (in Interior Wiring Harness)

* Sedan
*2 Depending on Equipment

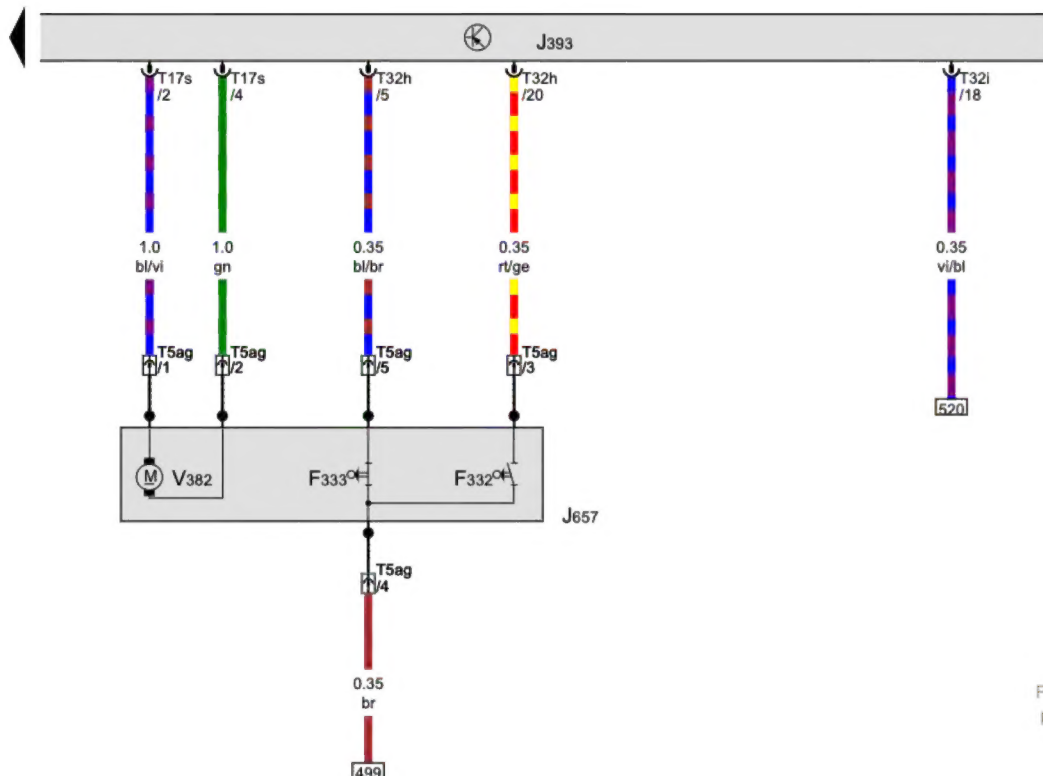

Comfort System Central Control Module, Door Closing Aid Control Module

- F332 Rear Lid Closing Aid/Unlock Stop Switch
- F333 Rear Lid Closing Aid/Lock Stop Switch
- J393 Comfort System Central Control Module
- J657 Door Closing Aid Control Module
- T5ag 5-Pin Connector, In the Luggage Compartment, Right
- T17s 17-Pin Connector
- T32h 32-Pin Connector
- T32i 32-Pin Connector
- V382 Rear Lid Closing Aid Motor



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

505 506 507 508 509 510 511 512 513 514 515 516 517 518


1251097380201

Power Rear Lid Opening Sensor, Power Rear Lid Opening Sensor 2, Power Rear Lid Opening Control Module

- G750 Power Rear Lid Opening Sensor, In the Rear Bumper
- G760 Power Rear Lid Opening Sensor 2, In the Rear Bumper
- J938 Power Rear Lid Opening Control Module
- ST2 Fuse Panel 2
- SF5 Fuse 5 (On Fuse Panel F)
- T4fh 4-Pin Connector
- T5ao 5-Pin Connector
- T16v 16-Pin Connector, Behind the Right Luggage Compartment Side Trim


744 Ground Connection in Spare Tire Well

- * Depending on Equipment
- *2 Refer to Applicable Wiring Diagram for Fuse Positions

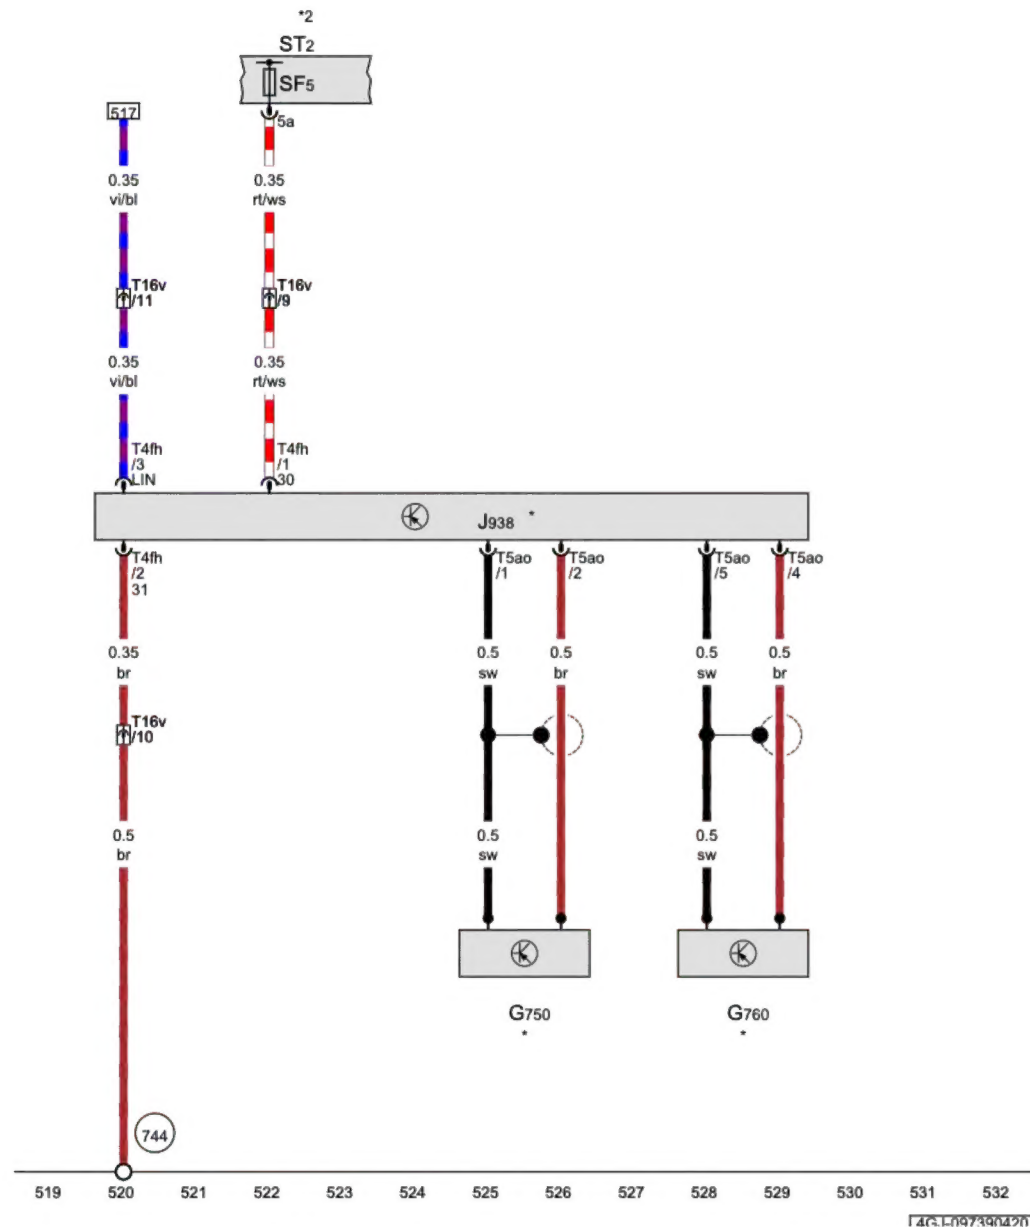

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

Data Bus on Board Diagnostic Interface, Comfort System
CAN Bus High Wire Junction, Comfort System CAN Bus
Low Wire Junction, Comfort System CAN Bus Low Wire
Junction 2

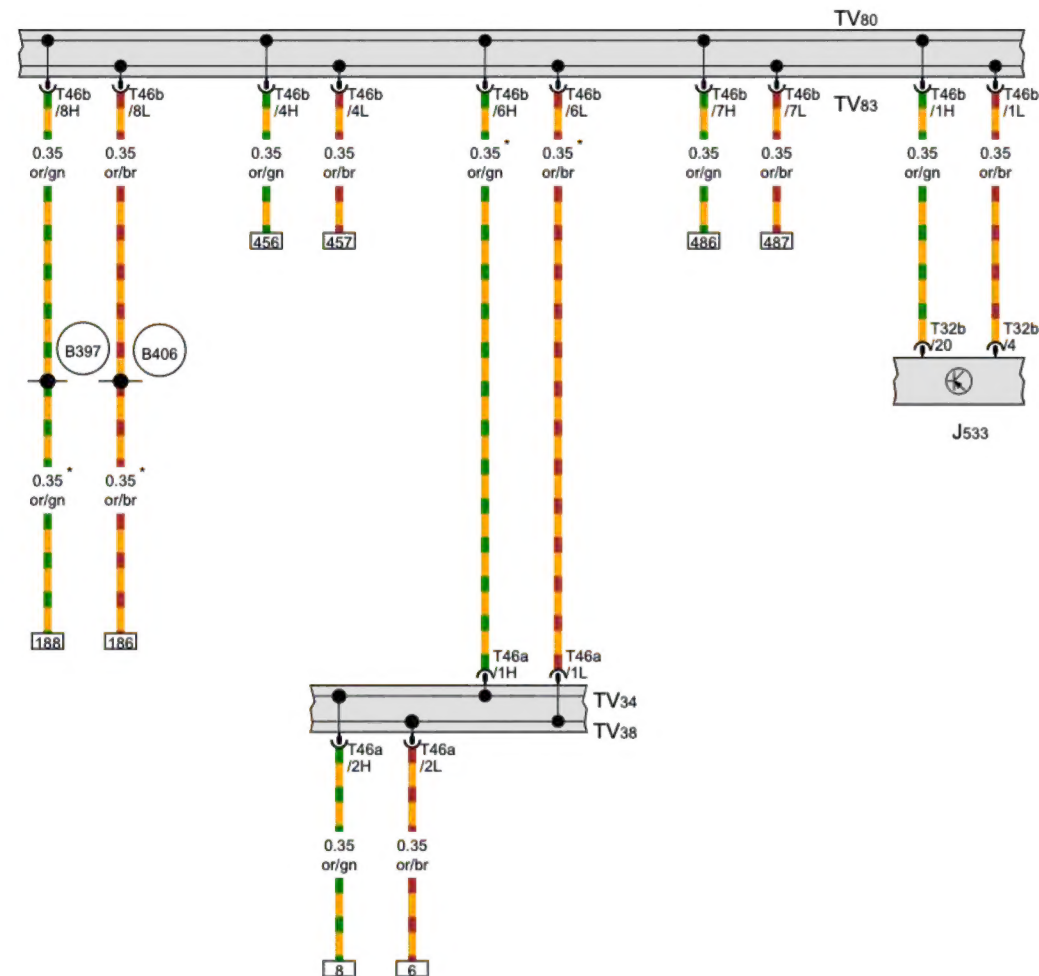

- J533 Data Bus on Board Diagnostic Interface
- T32b 32-Pin Connector
- T46a 46-Pin Connector
- T46b 46-Pin Connector
- TV34 Comfort System CAN Bus High Wire Junction
- TV38 Comfort System CAN Bus Low Wire Junction
- TV80 Comfort System CAN Bus High Wire Junction 2
- TV83 Comfort System CAN Bus Low Wire Junction 2
- B397 Comfort System CAN Bus High Connection 1 (in Main Wiring Harness)
- B406 Comfort System CAN Bus Low Connection 1 (in Main Wiring Harness)

* Data Bus Wire (CAN Bus)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

533 534 535 536 537 538 539 540 541 542 543 544 545 546

123456789101112131415161718192021222324252627282930313233343536373839404142434445464748495051525354555657585960616263646566676869707172737475767778798081828384858687888990919293949596979899100